

RTI CONTROLLER SETUP

CONTACTING TECH SUPPORT


Phone: 866.838.5052 704.909.5229

Email: TechSupport@SnapAV.com

ADDING THE DRIVER


1. Open the RTI controller software. This software is available via download from the RTI website.
2. Select the RTI **controller** and add it to the project. The driver is located on the MoIP product support tab at www.snapav.com website.
3. Once the control system window opens, navigate to the **driver** tab, then select **add**.

See example:

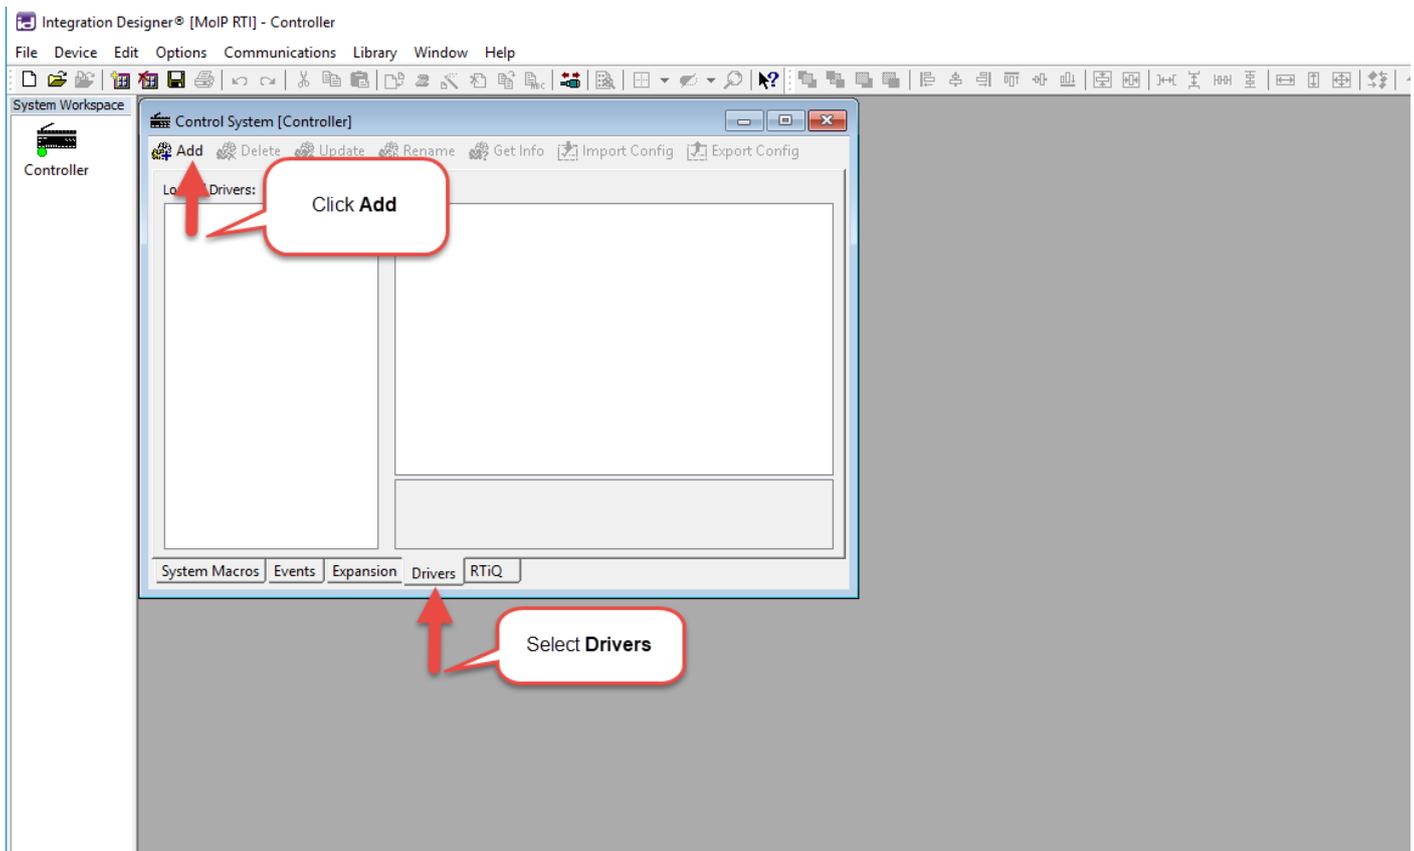

4. Next, browse to the file location and add it to RTI.


See example:

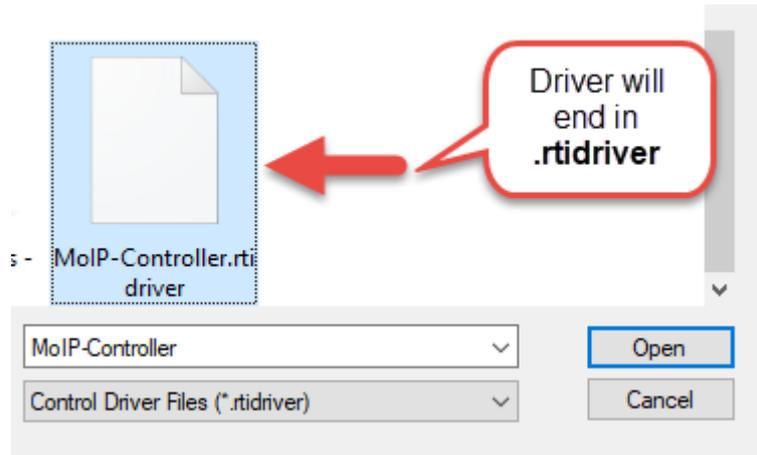

NETWORK SETUP

1. Once the driver is added, add the network settings for the device location and control.
2. Select **MoIP Controller** which is the default name of the driver loaded in the previous section.
3. Click IP Address and enter the IP address of the MoIP controller.

See example:

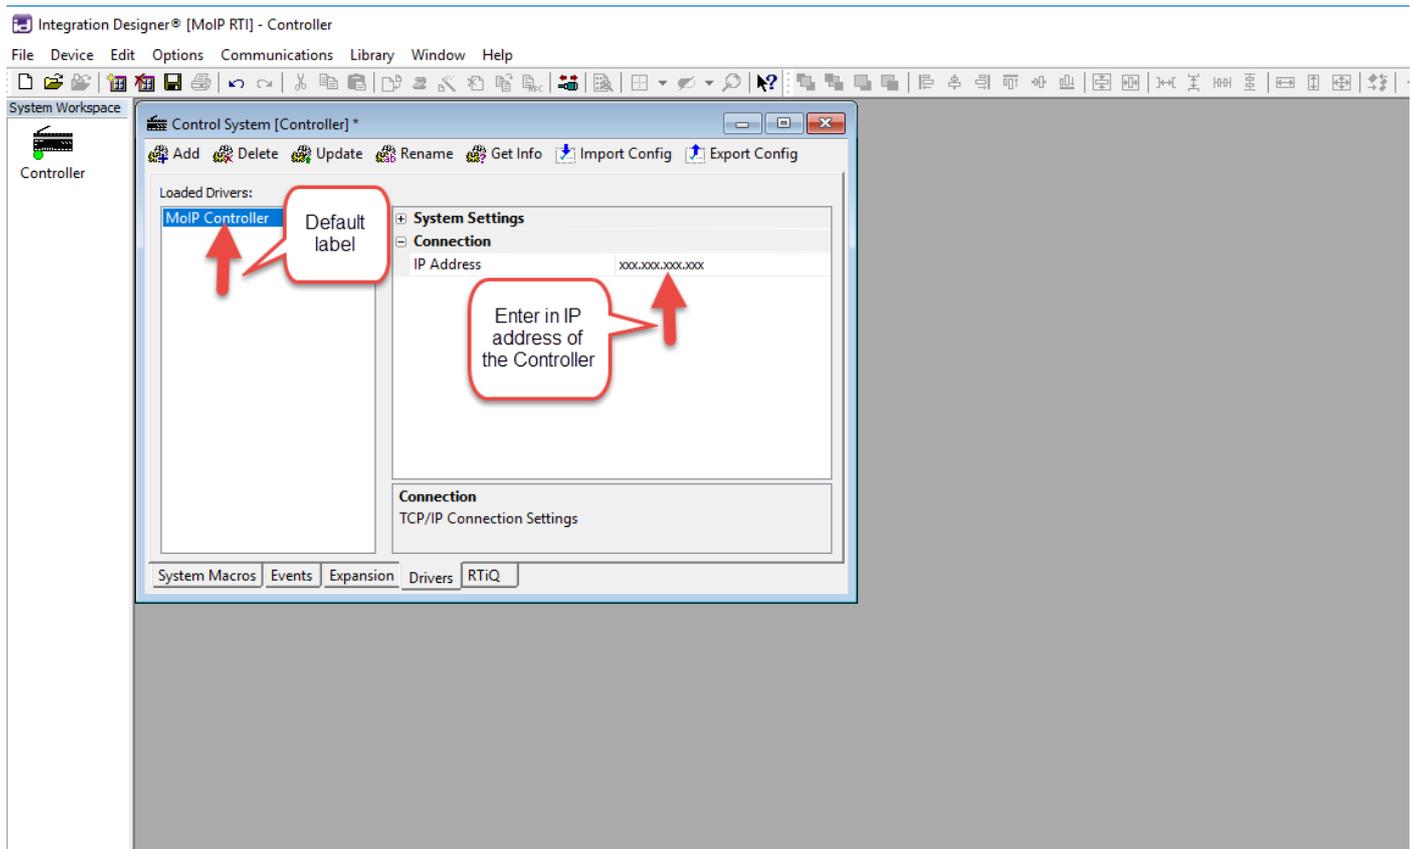

ADDING THE MOIP CONTROLLER TO A MACRO

1. Add the controller to a **Macro** once all network information is added.
2. Navigate to the **System Macro** tab, then click **Add System Macro**.
3. Add the Macro name and description to the appropriate fields. Click on the empty space under Macro to start creating.
4. Once Macro Editor opens, select **Driver Command**.
5. Select **MoIP Controller** under the **Command Type** field.

Note: The Transmitter and Receiver fields may have to be edited based on what they are labeled in the MoIP controller interface.

6. Select **Drag this Icon** to add a new step to the macro option.

See example:

Integration Designer® [MoIP RTI] - Controller

File Device Edit Options Communications Library Window Help

System Workspace

Controller

Control System [Controller] *

Add System Macro

ID	Macro	Description
1		Example

Click **Add System Macro**

Enter in Macro name under **Description**, and select the empty space under **Macro**

Click the arrow and select the **MoIP controller and Switch**

Macro Editor (System Mode) - [Example]

Enter in the correct Tx and Rx numbers based on the MoIP controller's interface

Once the above info is added, **drag** this icon to the blank workspace above

Command Type: Explain...

Driver Command

Switch (MoIP Controller)

Receiver: 1

Transmitter: 1

unused

unused

Drag this icon to add a new step to the macro.

OK Cancel Report... trash to delete them.