

# *SunBriteTV*<sup>®</sup>

True Outdoor Television

## **SB-WM-T-XL-BLK / SB-WM-F-XL-BLK**

**Weatherproof Universal Fixed and Tilt Mount for  
Extra-Large TVs**



## WARNINGS:

- Installation by a qualified professional is highly recommended for this product.
- Do not begin installation until you have thoroughly read and understand these instructions.
- This mount supports TVs up to VESA 1000x700, and a maximum load of 250 lbs. (113.6kg).
- Ensure the mounting wall will safely support four times the combined weight of the Mount and TV panel.
- The manufacturer does not accept responsibility for incorrect installation.

## SPECIFICATIONS:

- Maximum Load: 250 lbs. (113.6kg)
- Forward Tilt Range: - 8° /+ 13°
- Horizontal Tilt Range: ±5°
- Dacromet Coated Assembly
- Stainless Steel Mounting Hardware

## TOOLS REQUIRED:

- Power Drill
- 3/8" and 1/4" Drill Bit
- Phillips Head Screw Driver
- Level
- Socket Wrench with 1/2" Socket head

## BOX CONTENTS:

- Wall Plate (1)
- Arm Left (1)
- Arm Right (1)




## CAUTION:

This wall mount is intended for use only with the maximum weight of 250 lbs (113.6 kg).




## PACKAGE CONTENTS:

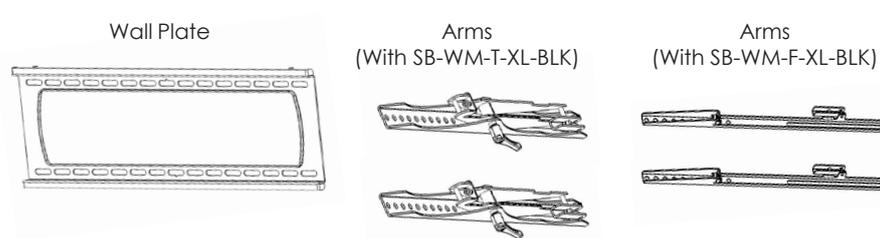

## HARDWARE KIT:

### Bag 1 (TV Arm Mounting)

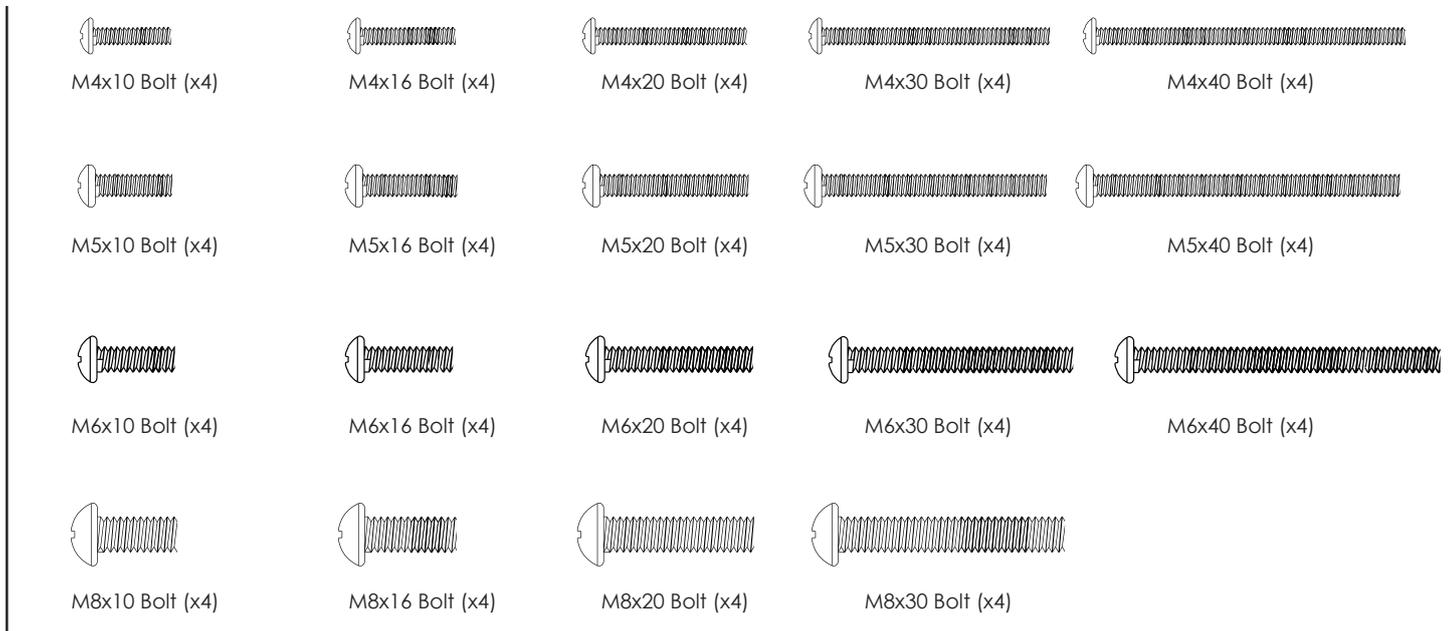

### Bag 2 (TV Arm Mounting)



### Bag 3 (Mount to Wall)



# INSTALLATION:

## Step 1: Mount the Wall Bracket Assembly

### For Mounting on a Stud Wall

- Hold the wall plate in the desired location and mark the mounting holes on the wall. (Figure 1)
- Pre-drill top and bottom holes into three wood studs using a 1/4" drill bit. Use all 6 lag bolts across the left, center and right portion of the wall plate. Be sure to drill into the center of the studs at least 2-1/2" deep. The use of a stud finder is highly recommended.
- Insert six lag bolts into holes through the wall plate and tighten down.

**WARNING:** Tighten bolts so that wall plate is firmly attached, but do not over-tighten. Over-tightening can damage the bolts, greatly reducing their holding strength.


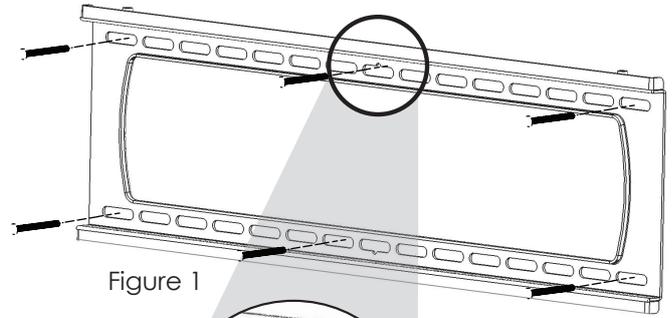


Figure 1

Use the screw slot in the wall bracket for temporary hanging during installation.

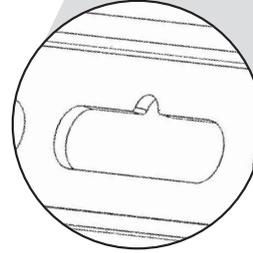

### For Mounting on a Concrete Wall

- Hold the wall plate in the desired location and mark the mounting holes on the wall. (Figure 1)
- Pre-drill six holes into concrete using 3/8" drill bits to a depth of 2 1/2". Insert concrete wall anchors and tap in with a hammer if necessary (Figures 2 & 3).

**WARNING:** Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components. When installing wall arm assembly on cinder block, first verify there is a minimum of 1-3/8" of concrete thickness for the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1" minimum from the side of the block. Cinder block must meet ASTM C-90 specifications. To avoid breaking out the back of the hole when entering a void or cavity, it is suggested that a standard electric drill on slow setting instead of a hammer drill is used to drill the hole. Concrete must be 2000 psi density minimum. Lighter density concrete may not hold concrete anchor.

- Insert the lag bolts into the wall anchors through the wall plate and tighten them all.

**WARNING:** Tighten bolts so that wall plate is firmly attached, but do not over-tighten. Over-tightening can damage the bolts, greatly reducing their holding strength.

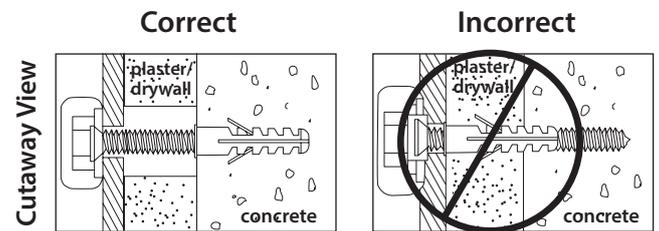


Figure 2

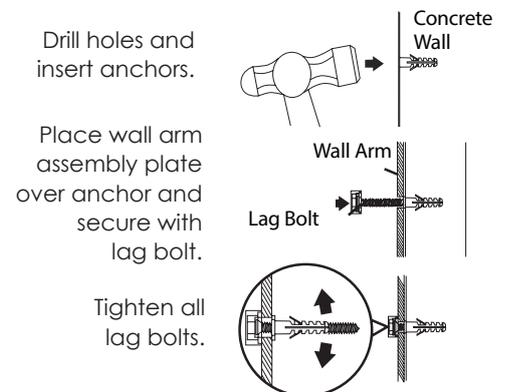


Figure 3

## Step 2: Mount Arms to TV

- Determine the diameter of the screw your TV requires by carefully trying to hand-thread bolts from bags 1 & 2 into the mounting holes on the rear of the TV. If there is any resistance, stop immediately.
- Mount the arms to the TV using the shortest bolts that will thread into the holes. Always use a washer between each bolt head and the wall plate. Use the included plastic spacers to adjust the spacing between the arms the back of the TV if needed. (Figure 4)
- Ensure the arms are installed flat side to television and are square to each other after all screws have been installed.

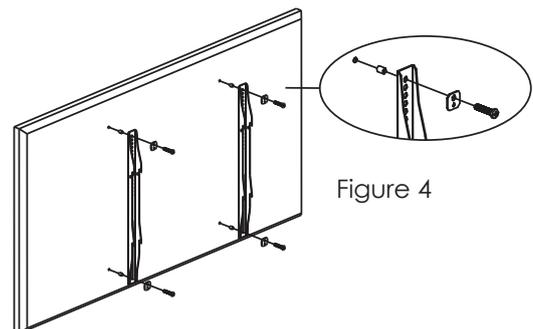


Figure 4

### Step 3: Hang TV on the Wall Plate

- A. Carefully lift the TV to hook the arms over the top lip of the wall plate. Allow the lower portion of the arms to swivel in under the bottom lip of the wall plate. Do not release the TV until it is completely connected to the wall plate.

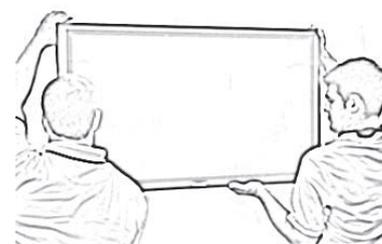


Figure 5

## ADJUSTMENTS:

### Adjust Horizontal Level and Tilt

#### Forward Tilt Adjustment (SB-WM-T-XL-BLK)

- A. Turn tilt adjustment lever (ratchet) clockwise to tighten grip; counterclockwise to loosen grip.
- B. Pull tilt adjustment lever (ratchet) away from arm and then turn clockwise/counterclockwise to desired location. Let the tilt adjustment lever (ratchet) sit in place.
- C. Repeat as needed to loosen/tighten the tilt.

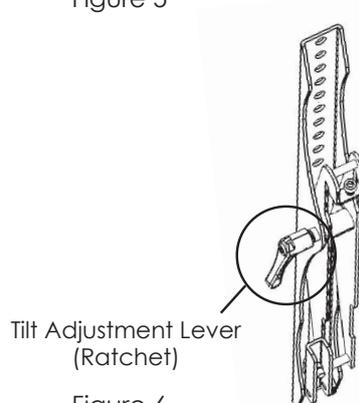


Figure 6

#### Horizontal Adjustment

If TV is not horizontally level when mounted, tilt adjustment screws are included at the top of each arm for micro-adjustments (Figure 7). Use the provided hex key to raise or lower the screw, which will in turn raise or lower the mount.

Due to TV weight, it may be easier to lift the TV slightly when adjusting the screw. Caution should be taken to avoid any slips or drops to avoid damage and/or injuries.


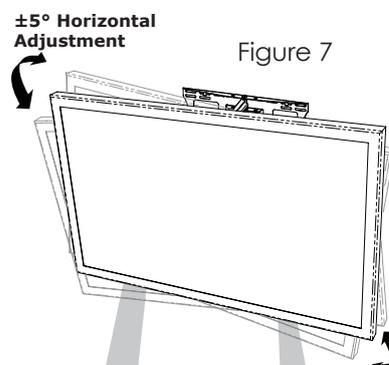


Figure 7

### Locking

- A. To lock the arms to the wall bracket, twist the locking tabs until the edge catches behind the bracket. The hex key can be used as a tool to help with this step. Padlock is optional (not included).

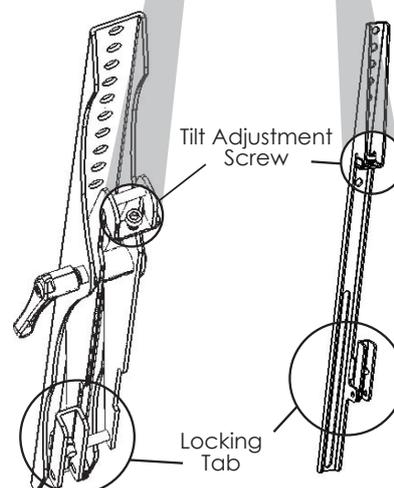

### Lifetime Limited Warranty

SunbriteTV™ Mounts have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SunbriteTV or a designated service center with prior notification and an assigned return authorization (RA) number.

Technical Support 866.838.5052