

# FS SERIES

## Fully Assembled Rack System w/ DC Fans



SR-FS-SYSTEM-DC- 15U / 21U / 27U

### Product Overview

#### Package Contents

- A. Top Cover
- B. Frame
- C. Front Door - Tinted Glass
- D. Side Panel (x2)
- E. Rear Panel
- F. Bottom Cover
- G. 2U Rack Shelf (varies per rack units)
- H. 2U Vented Panel (varies per rack units)
- I. Casters (x4)
- J. DC Fans (x2)
- K. Locking Door Latch
- L. Door Latch Plate
- M. Ground Studs (4) (located on top and bottom covers in the rear of rack)
- N. Nylon Washers (3)
- O. Pre-installed Bushings (3) (located inside hinge holes)

#### Key Features

- 750 lbs. Max Load Capacity
- Tamper Resistant Lock on Reversible Tempered Glass Front Door
- Removable Side and Rear Panels for Easy Serviceability
- Front and Rear Rails Tapped with 10/32 Threads to Allow for Mounting of Components in Front or Rear of Rack
- Superb Ventilation System - Strategically Placed Fans\* & Vents to Ensure that Equipment Stays Cool
- Lifetime Limited Warranty

#### Included Accessories


Each rack includes the following number of shelves and vent panels.

Rack	Shelves	Vented Panels
SR-FS-SYSTEM-DC-15U	2	2
SR-FS-SYSTEM-DC-21U	3	3
SR-FS-SYSTEM-DC-27U	5	5

**\*Notes:** Fans are always on, we recommend they are plugged into a switching surge protector or AV receiver.

Please be sure to check with local authorities in regard to code requirements for compliance.

If the door is rubbing against the base, then add the necessary amount of nylon washers (N) onto the bottom hinge pin to allow for extra clearance.

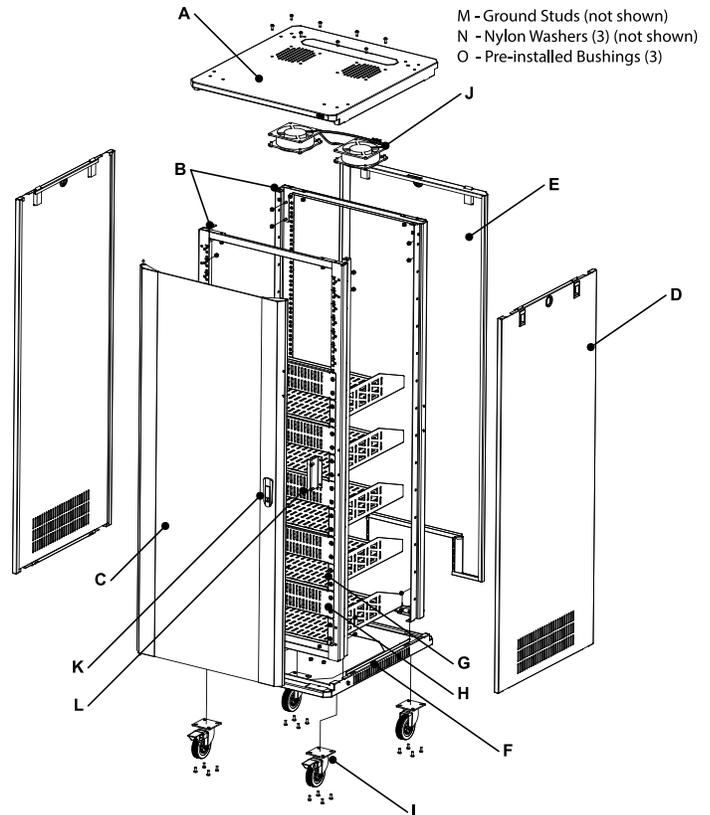

#### CAUTION!

When loading equipment into cabinet, ensure that the casters are locked, and load heavier equipment at the bottom of the rack.

#### Reversing Front Door

##### Tools Required:

- #2 Phillips Head Screwdriver

##### Reversal Steps


1. Remove both side panels (D), and open the front door (C).
2. Remove the Door Latch (K) by removing the clamp with a #2 Phillips screwdriver, and slide the latch out of the door.
3. Remove the Latch Plate (L) using a #2 Phillips screwdriver.
4. Pull the top and bottom hinge pins out of the locking position and slide the door up and out. Remove the bottom, pre-installed bushing (O).
5. Insert the bushing into the opposite bottom hinge pin hole.
6. Flip the door over, and slide the bottom hinge pin in first. Once in place, insert the top hinge pin. Ensure hinge pins are secure.
7. Attach the Latch Plate (L) to the rack opposite the door hinges using a #2 Phillips screwdriver.
8. Insert the Door Latch (K) into the door, and secure with the clamp using a #2 Phillips screwdriver.
9. Close and latch the door, and reattach the side panels (D).



**FS SERIES**  
Fully Assembled Rack System w/ DC Fans

SR-FS-SYSTEM-DC - 15U / 21U / 27U

Dimensions

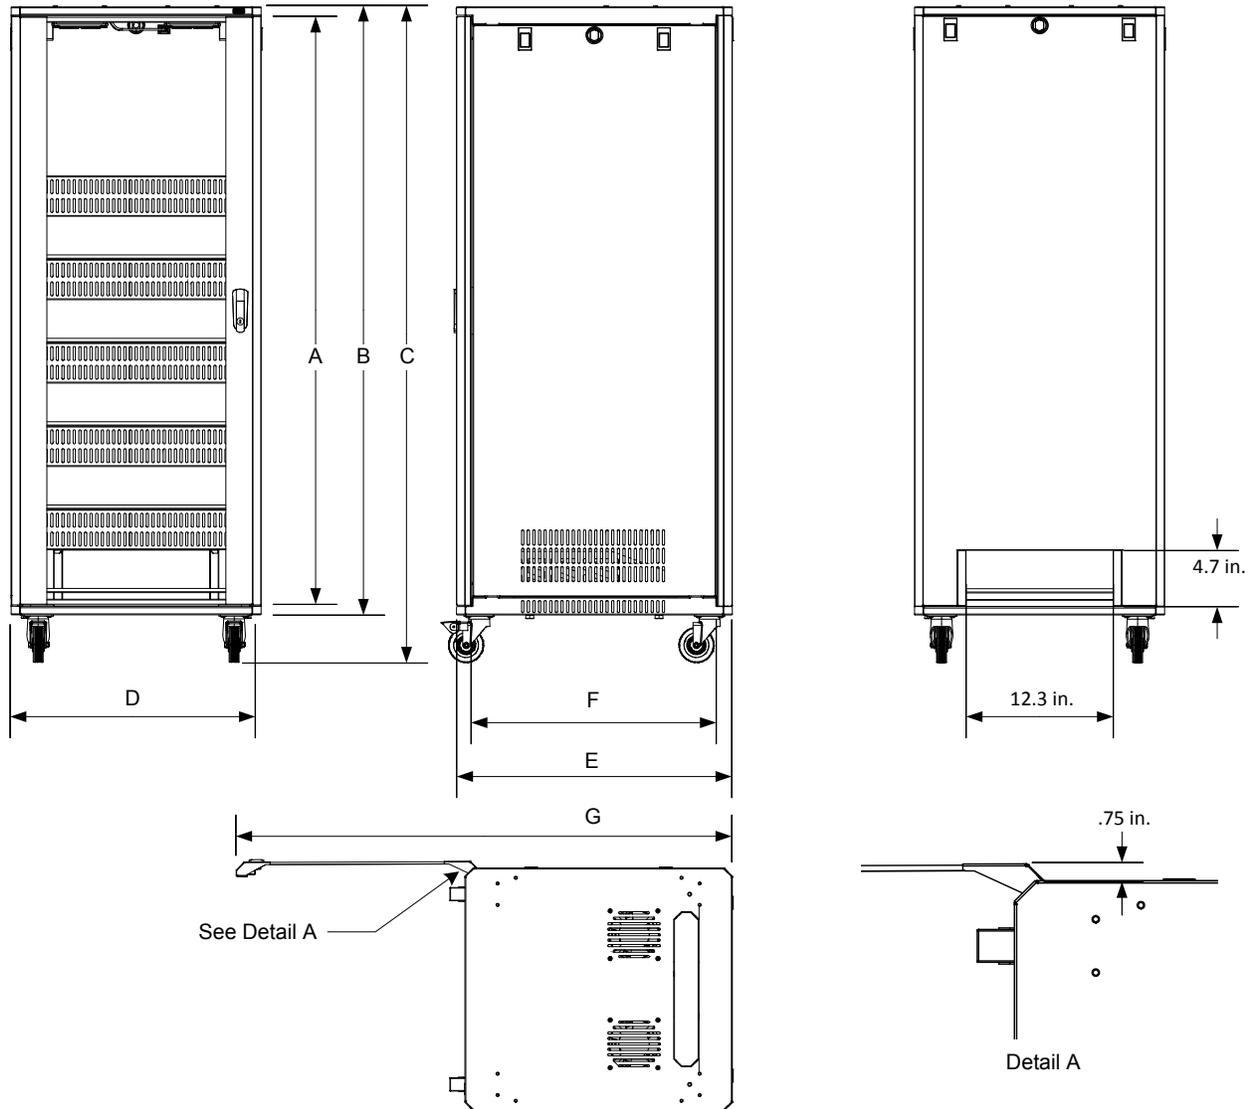

Product	A-Racking Height	B-Height (Overall)	C-Height (With Casters)	D-Width (Overall)	E-Depth (Overall)	F-Usable Depth	G-Depth (Door Open)
SR-FS-SYSTEM-DC-15U	15U	30.25"	34"	21.1"	23.25"	18.25"	43.2"
SR-FS-SYSTEM-DC-21U	21U	40.75"	44.5"	21.1"	23.25"	18.25"	43.2"
SR-FS-SYSTEM-DC-27U	27U	51.25"	55"	21.1"	23.25"	18.25"	43.2"



**Lifetime Limited Warranty**

All Strong™ products have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).

For Technical Support: 1.866.838.5052