


SunBrite

Veranda Outdoor Television


Quick Start Guide: SB-V-43-4KHDR-BL, SB-V-55-4KHDR-BL,
SB-V-65-4KHDR-BL, SB-V-75-4KHDR-BL

Planning the Location

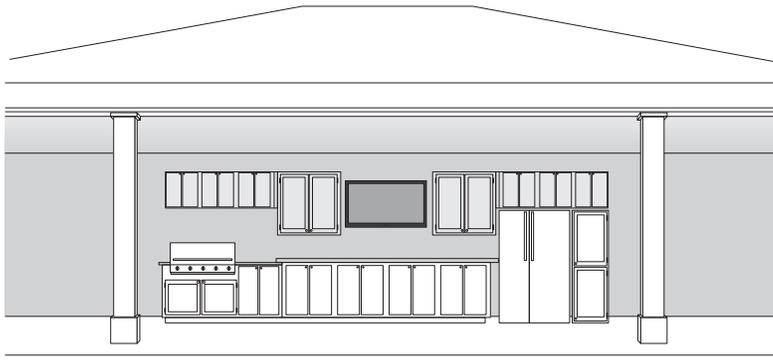


Veranda Series TVs are completely weatherproof. For best viewing, please install in a shaded environment.

Sources/What to Watch

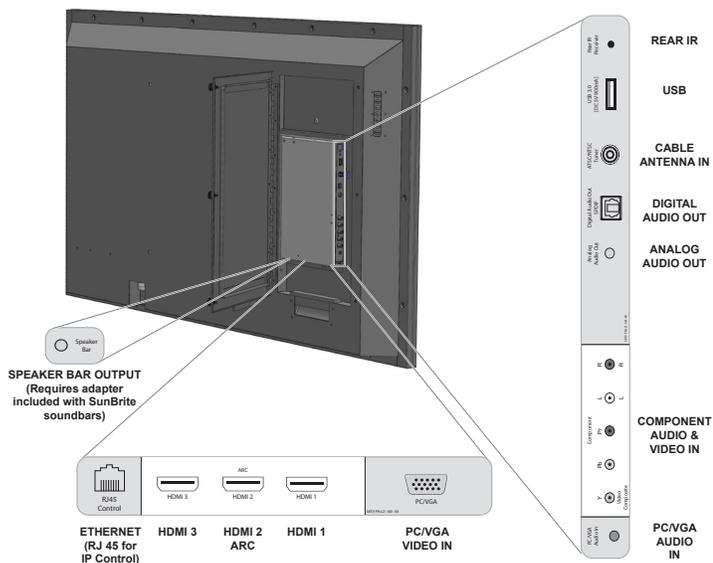

- Signals can be sent from any source using an HDMI, Component, or Digital Antenna connection and corresponding cables.
- To attach a SunBrite sound bar (purchased separately), use the proprietary cable included with the sound bar.
- Refer to the operator's manual for detailed instructions on cable connections.

Cable Management

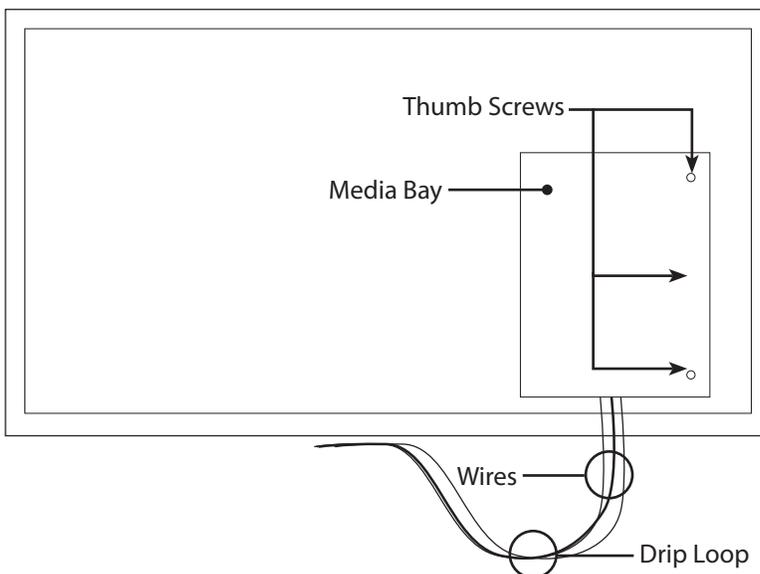

- After all connections are made, all wires must exit the media bay from the bottom.
- Up to 5 cables can exit the media bay while still maintaining the integrity of the weatherproof door seal.

Note: Leave a drip loop as the wires enter the compartment.

- Tighten the thumb screws completely to weatherproof the TV.

SETUP



- Use the TV remote to access the setup menu and run initial installation.
- Select Antenna or Cable then enter to continue. If you are using antenna or cable click start to learn the channels, otherwise select skip. Select Exit Setup to finish.
- Refer to the operator's manual for detailed instructions. Press "Menu" on the remote control to access the internal operation manual or visit the product support page on www.snapav.com or www.sunbrite.tv.

CONTROL

The Veranda can be controlled via the included remote or universal remote.

IR codes are available at: <https://www.sunbrite.tv/support/product-support/product-faq>.