

 episode

INSTALLATION MANUAL

EE-IR-RCVR-SM

EE-IR-RCVR-TT

EE-IR-RCVR-TUBE



REAL. LIFE. SOUND.



PRODUCT OVERVIEW

Welcome to Episode®. This product is engineered to provide years of exceptional reliability. We appreciate your business, and we stand committed to providing our customers with the highest degree of quality and service in the industry.

PACKAGE CONTENTS

- 1x IR Receiver
- 1x Washer (Tube only)
- 1x 3.5mm to 3-pin Male Screw Terminal Adapter
- 1x 3.5mm to 3-pin Female Screw Terminal Adapter
- 2x Adhesive Strips (SM/TT models only)*
- 1x Installation Manual

NOTE: Adhesive strips for the TT model are stored inside of the plastic housing. See 3.1.1 for details on converting an EE-IR-RCVR-TT to EE-IR-RCVR-SM.

SETUP


EE-IR-RCVR-SM/TT Placement

Determine the best location for the IR Receiver. The IR Receiver should be placed so that it does not directly face other light sources such as lamps or displays (standard, LCD, or plasma).

Ensure that this location is within the distance parameters of the IR Receiver.

Convert EE-IR-RCVR-TT to EE-IR-RCVR-SM

1. Remove the screw and open the plastic housing.

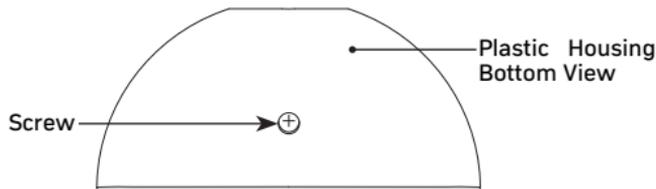

2. Remove the module and adhesive strips inside to use as a surface-mount IR Receiver.

EE-IR-RCVR-TUBE Mounting

Drill a 1/2" hole in any surface, such as a cabinet panel. Pass the lead and body of the EE-IR-RCVR-TUBE through the hole, and secure from the rear with the supplied nut.



CONNECT

 
Standard Wiring

Connect the IR Receiver to an IR Repeater, or any device with an IR Receiver input.

EE-IR-RCVR-TUBE




EE-IR-RCVR-SM/TT



IR Connection
Block

or

 Device with
IR Receiver Input




Note: Do not connect the IR Receiver to an IR Emitter connection as it may damage the IR Receiver.

IR Repeater Screw Terminals

When using an IR Repeater, the IR Receiver can be connected to the screw terminals by removing the 3.5mm (1/8") connector. When this method is used, proper polarity **must** be maintained in order to ensure proper operation.

 EE-IR-RCVR-TUBE




EE-IR-RCVR-SM/TT



or

To Screw Terminals

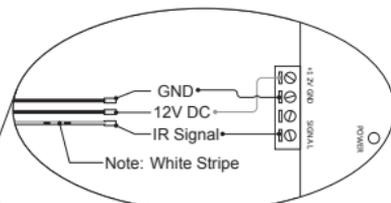




SPECIFICATIONS


Power	+12VDC @ 25mA
Maximum Recommended Cable Length	1000' with CAT 5 cables
Carrier Frequency Acceptable Range	30kHz to 60kHz
Control Range	4' to 40' without speaker grille 2' to 28' with speaker grille *Actual range depends on signal strength and ambient noise conditions.
Control Angle	0+/- 45° off axis
Dimensions	
EE-IR-RCVR-TABLE	0.86" H x 3" W x 1.42" D
EE-IR-RCVR-SURFACE	0.68" H x 2.55" W x 0.39" D
EE-IR-RCVR-TUBE	0.63" W x 1.46" D

DIMENSIONS


EE-IR-RCVR-TABLE

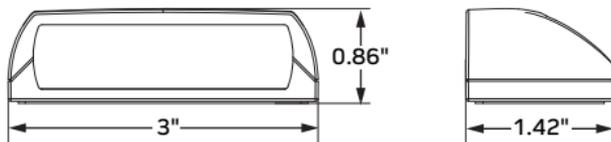

EE-IR-RCVR-SURFACE

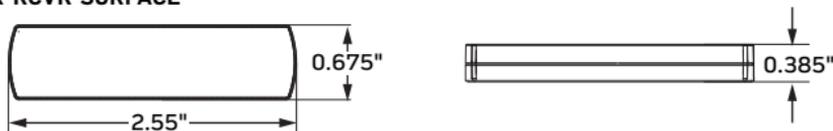

EE-IR-RCVR-TUBE

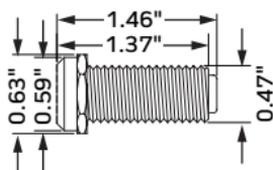

WARRANTY

3-Year Limited Warranty

Episode® Electronics products have a 3-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products that have been abused, modified, or disassembled. Products to be repaired under this warranty must be returned to a designated service center with an assigned return authorization (RA) number. Contact technical support for an RA number.

CONTACTING TECHNICAL SUPPORT

866.838.5052

support@episodeaudio.com



Rev: 160106-1120