

VS-1616/VS-3232/VS-6464 Family Card Installation Sheet


The attached card mounts in one of the slots on the rear of the chassis. Slots are numbered from left to right. (The process for inserting cards is the same for all cards and the figures are for illustration purposes only.)




An input card must only be mounted in a slot designated for input cards (slots 1 to 4 and 9 to 12) and an output card must only be mounted in a slot designated for output cards (slots 5 to 8 and 13 to 16).

To install an I/O card:


1. Power off the machine and all devices connected to it.
2. Using a Phillips screwdriver, loosen the screws at the top and bottom of the blanking plate.
3. Remove the blanking plate from the slot and store it for possible future use.
4. Remove the new card from its shipping box and anti-ESD bag.
5. Holding the card by the lower handle, align the card with the plastic guide rails.
6. Slide the card into the chassis until the front of the card makes contact with the connector inside the chassis.
7. Press the card firmly into the slot until the connector plate is flush with the rear panel of the chassis and the connector is fully seated.
8. Using a Phillips screwdriver, tighten the retaining screws at the top and bottom of the card to secure it to the chassis.
9. Power on the machine and **follow the procedure in the user manual to configure the new card.**
10. Power on the peripheral devices.

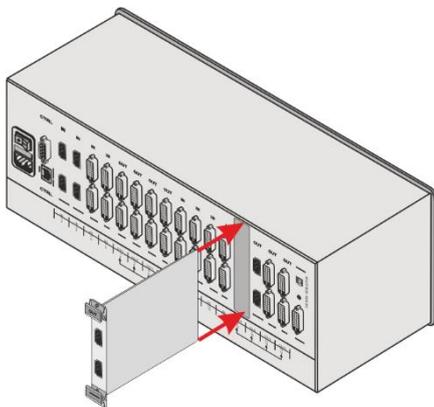

VS-1616 HDMI Card

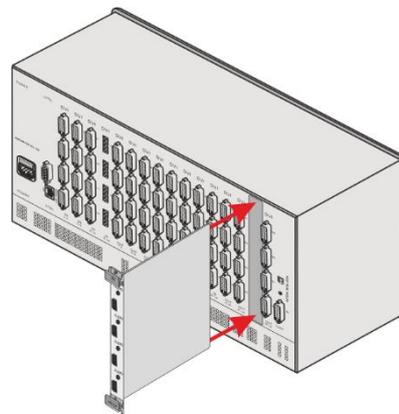

VS-3232 HDMI Analog Audio Card

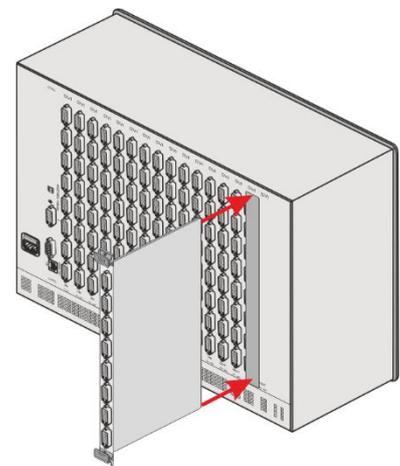

VS-6464 DVI Card



For optimum range and performance use the recommended Kramer cables available at www.kramerav.com.
Using third-party cables may cause damage!

Safety Instructions



- Caution:** There are no operator serviceable parts inside the unit.
- Warning:** Use only the power cord that is supplied with the unit.
- Warning:** Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
- Warning:** Disconnect the power and unplug the unit from the wall before installing.

See www.KramerAV.com for updated safety information