


4a. ALIGN RING-PIN HOLES AND INSERT (2) RING PIN ON BOTH SIDES OF ASSEMBLY. FOR ADDITIONAL TAMPER-PROOF INSTALLATION, INSTALL (2) #6-32 x 1/4 LONG PAN HEAD SCREW.


4b. CENTER ADJUSTABLE HANGER AND LOOSEN WINGNUT. ALIGN ADJUSTABLE HANGER HOLES WITH RETRACTOR FLANGE HOLES, ENSURING THE HANGER IS VERTICAL AS POSSIBLE, AND INSERT APPROPRIATE-LENGTH CLEVIS PIN. SECURE CLEVIS PIN WITH HAIR-PIN COTTER.

4c. LIFT RETRACTOR ASSEMBLY TO TAKE UP ALL SLACK AND TIGHTEN HANGER WINGNUT TO ENSURE ASSEMBLY WEIGHT IS CARRIED BY THE TABLE. HANGER NUT CAN BE TIGHTENED FOR ADDITIONAL INSTALLATION SECURITY.

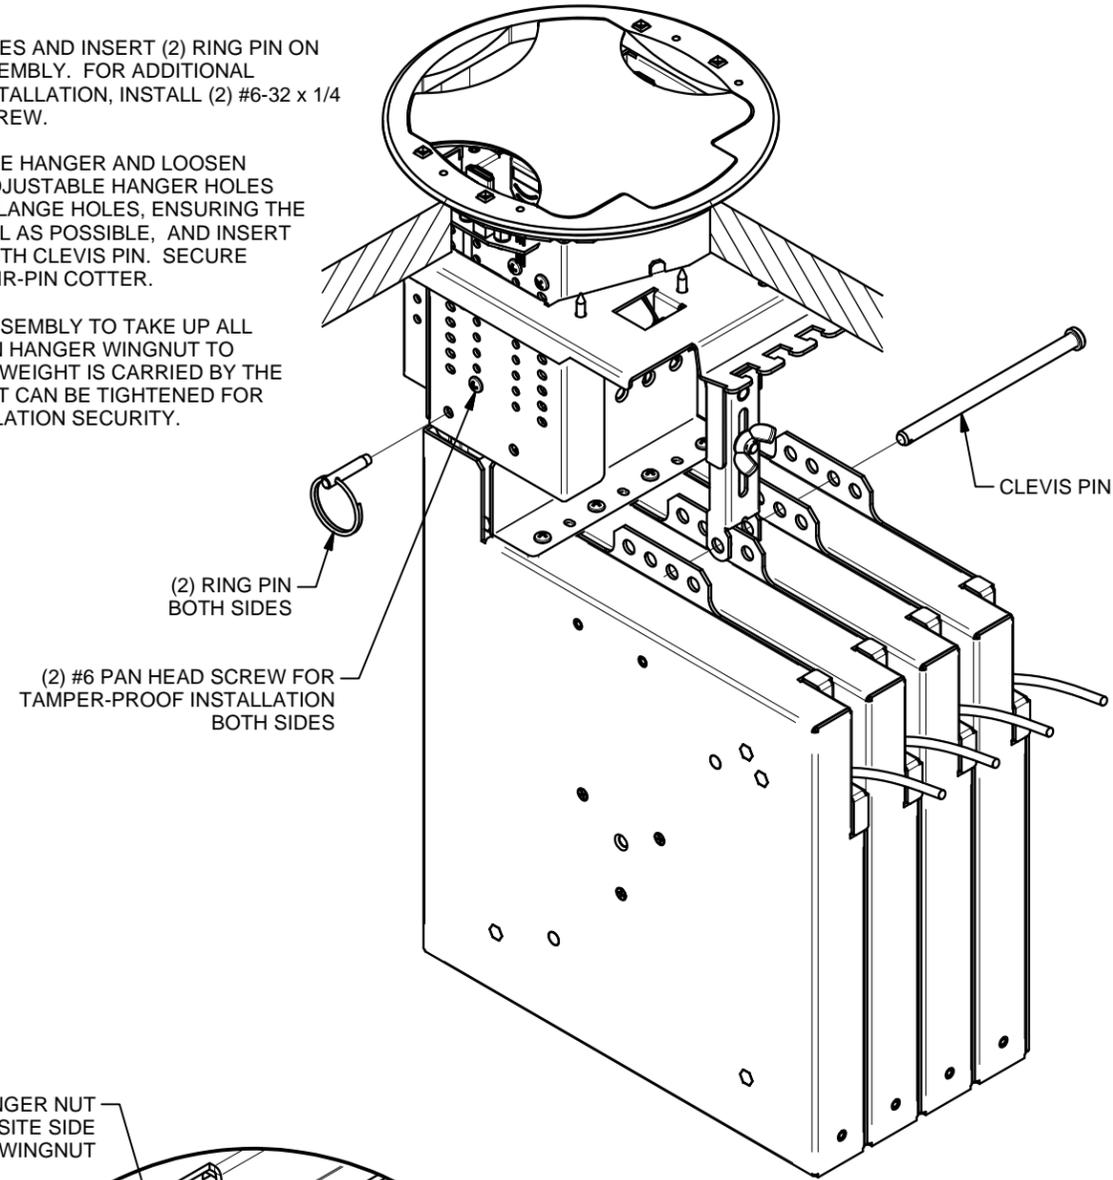

ADJUSTABLE HANGER NUT LOCATED ON OPPOSITE SIDE OF WINGNUT


SECURE CLEVIS PIN WITH HAIR-PIN COTTER

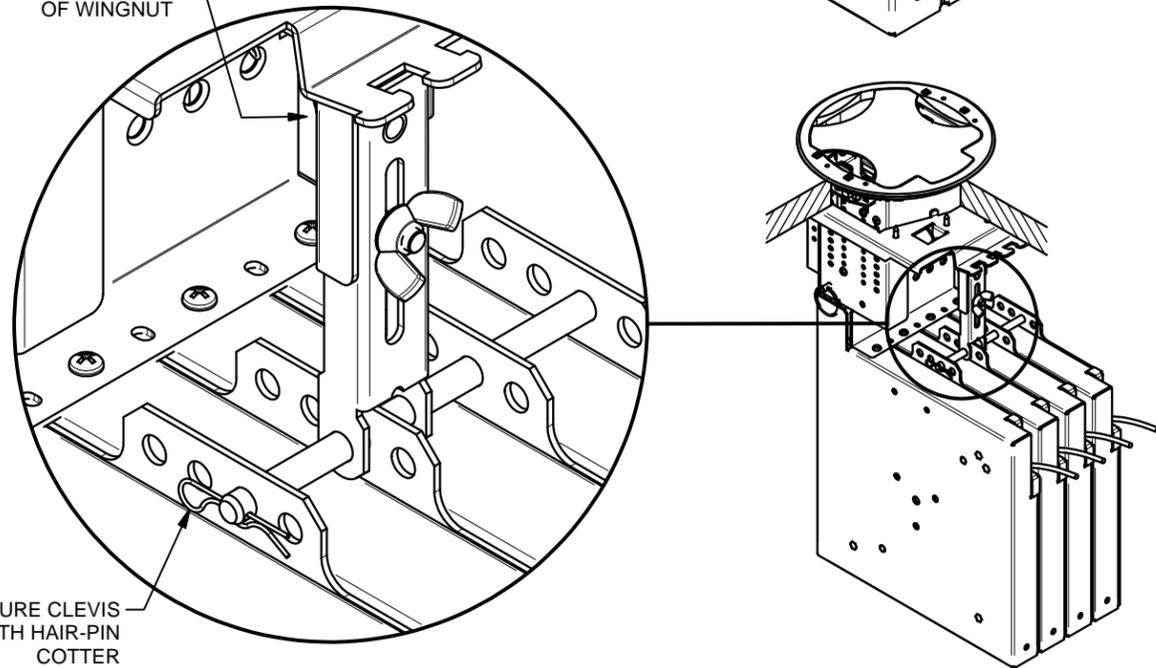


# FSR TBRT-SERIES CABLE RETRACTOR INSTALLATION INSTRUCTIONS

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


1a. ASSEMBLE RETRACTORS & GAP-FILLER BRACKETS AS REQUIRED ONTO T6 GATHER BRACKET.

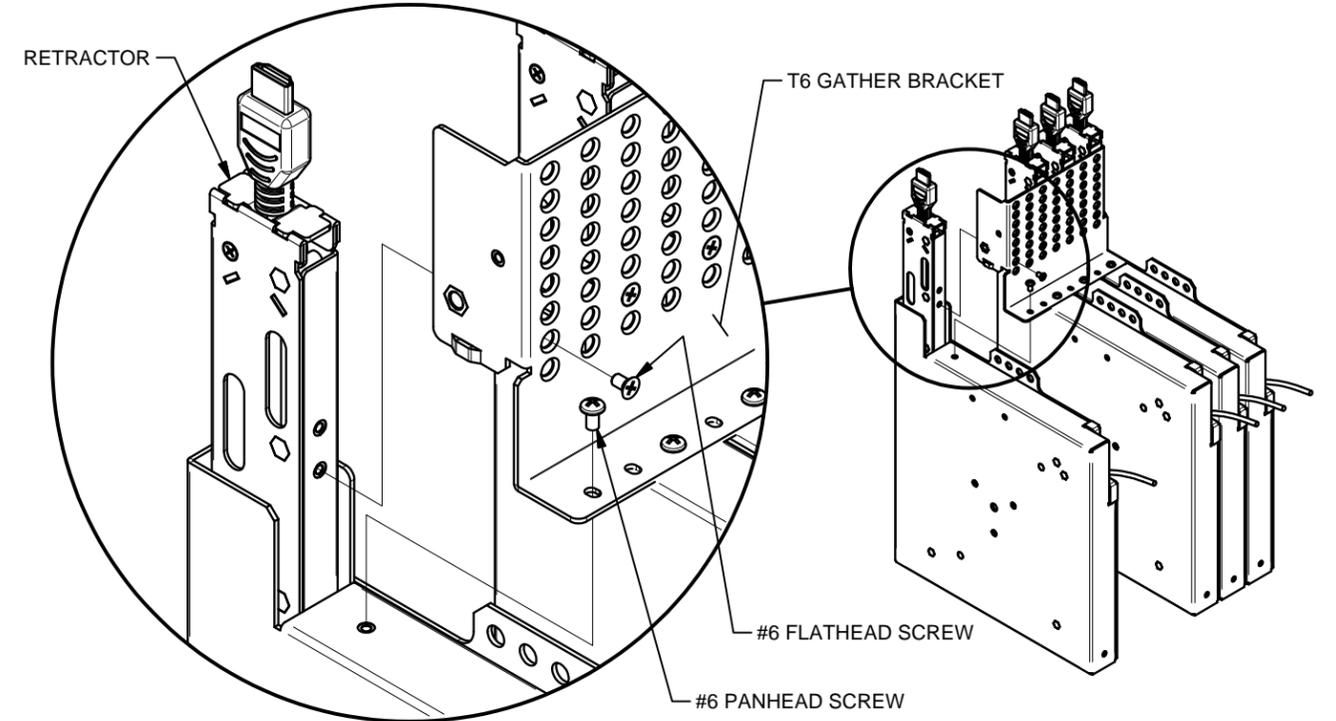


GAP-FILLER BRACKET

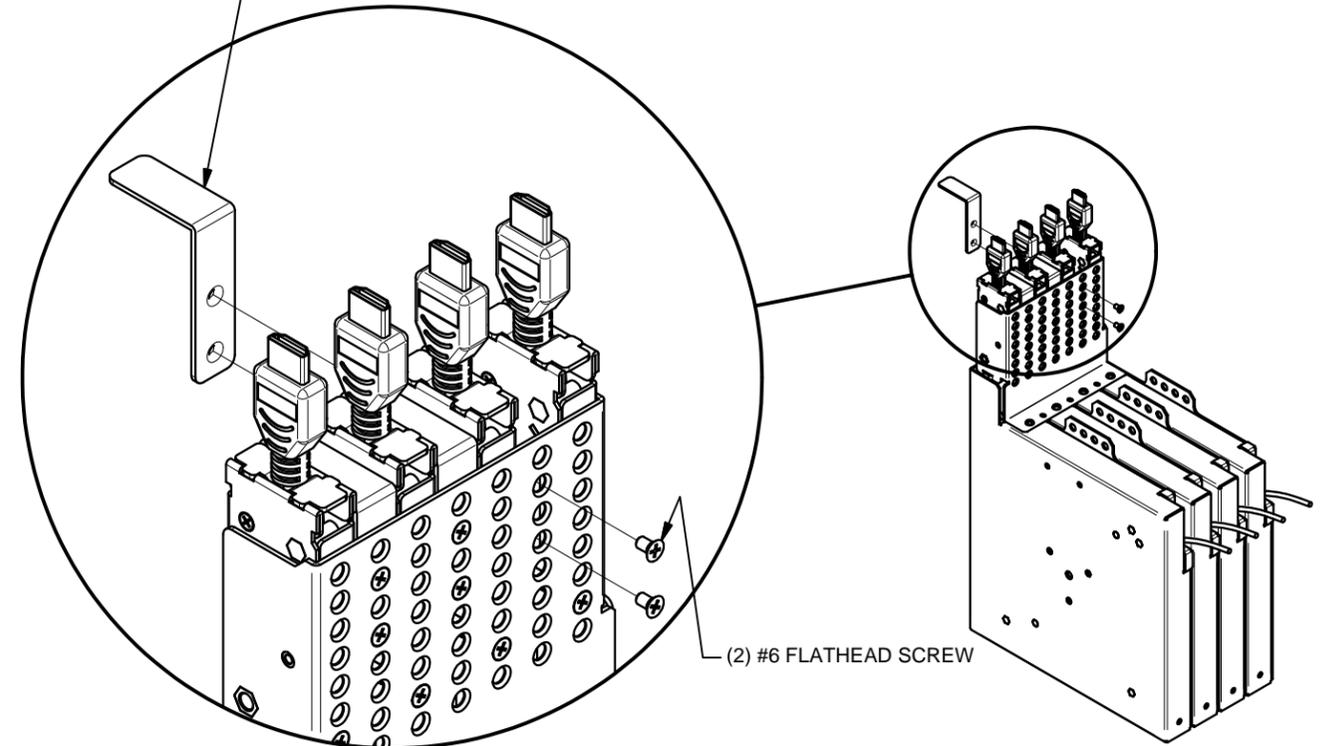

1b. FOR 3 OR FEWER RETRACTORS, INSTALL CHASSIS SUPPORT BRACKET ONTO RETRACTOR.

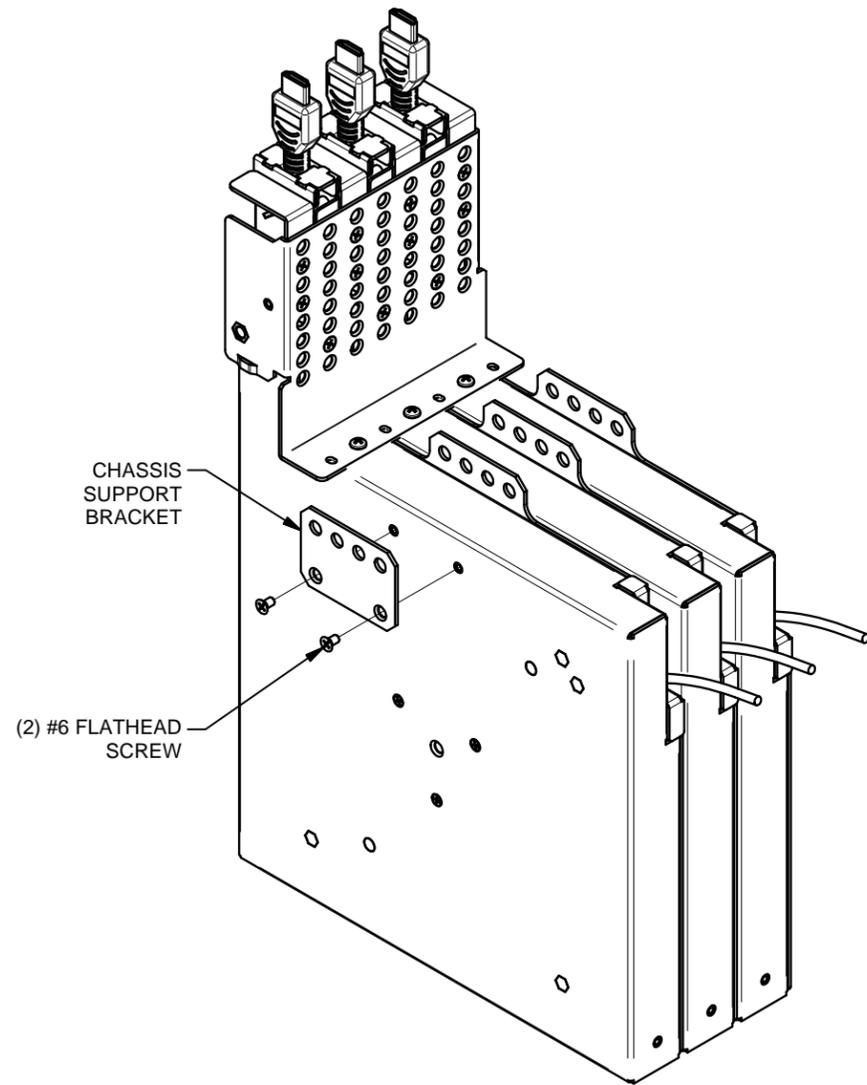

2. INSTALL ADJUSTABLE HANGER ONTO T6 SHROUD WITH 4" CLEVIS PIN AND SECURE WITH HAIR-PIN COTTER.

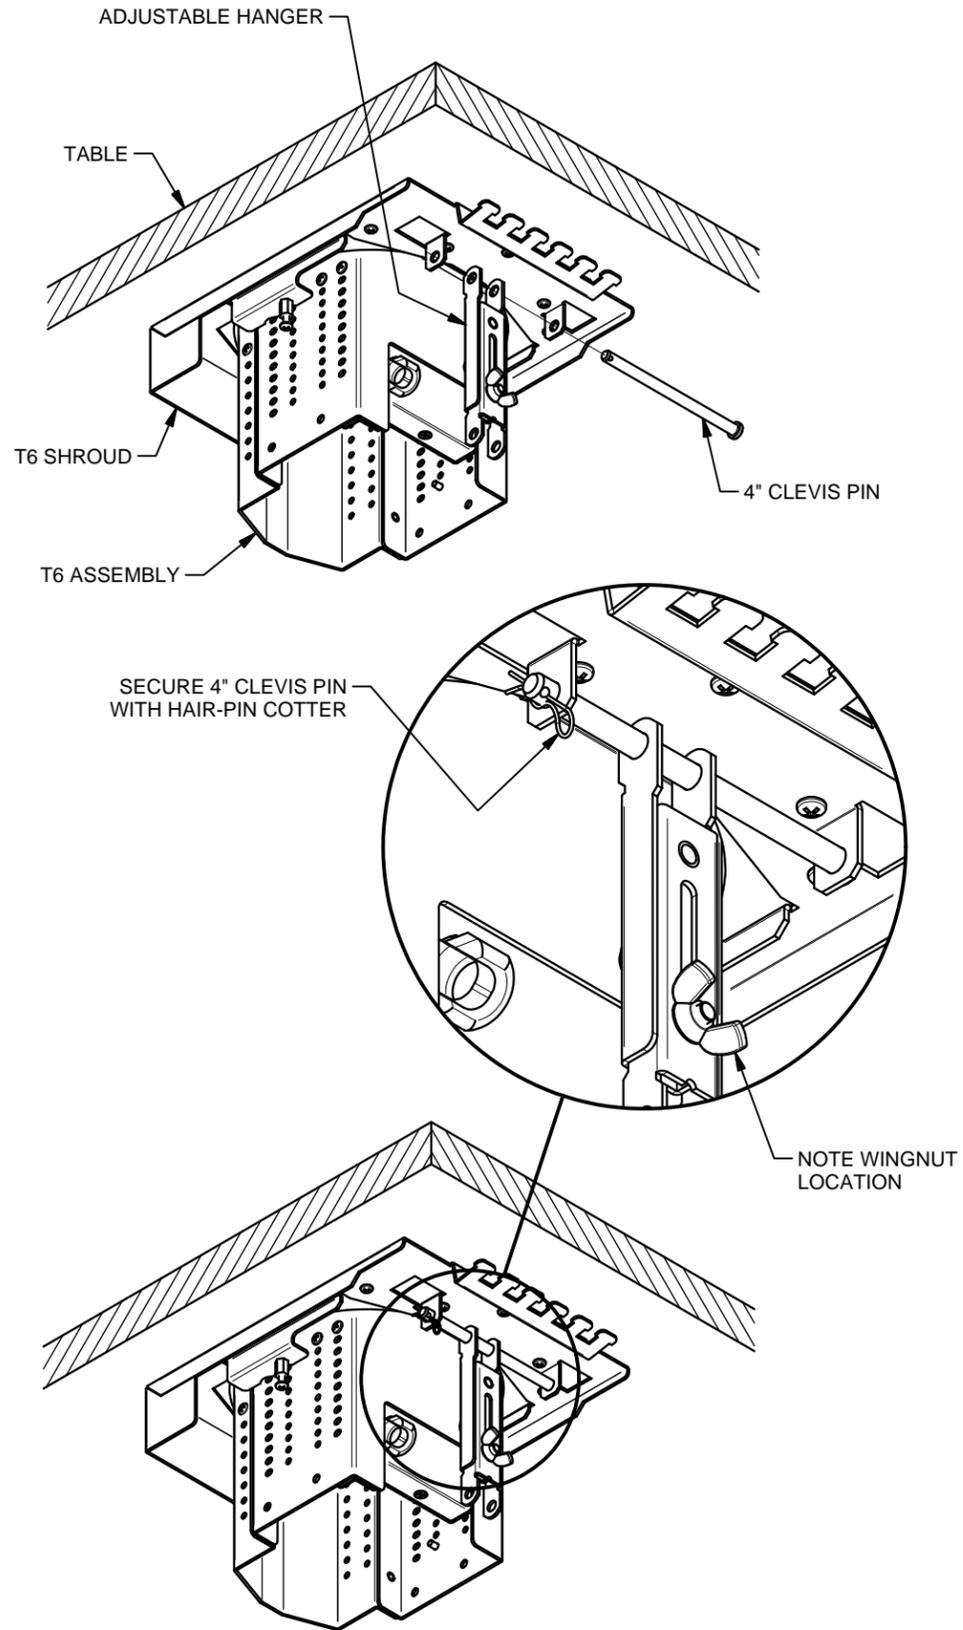

3. SLIDE RETRACTOR ASSEMBLY UP INTO T6 ASSEMBLY.

