KRAMER



Installation Instructions

MODEL .

RK-19N

Under-the-table Brackets

















SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

www.kramerAV.com info@kramerel.com

RK-19N Under-the-table Brackets

Congratulations on purchasing your Kramer metal **RK-19N** under-the-table brackets (one left bracket and one right bracket) for installing 1U machines underneath a wooden table or podium top. The **RK-19N** supports the following device types:

- 1U—for example, VP-732 or VP-773A
- 1/2-19" 1U (extrusion)—for example, PIP 4
- 1/3-19" 1U (extrusion)—for example. SL-10
- 1/4-19" 1U— for example, 907xI

The **RK-19N** is sturdy, cost-effective and easy to install.

The **RK-19N** consists of two metal brackets which are attached to the table via the six rim screw holes.

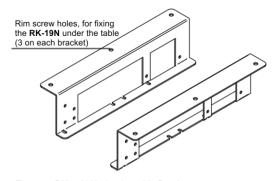


Figure 1: RK-19N Under-the-table Brackets

Installing RK-19N

To install the RK-19N:


- Attach the RK-19N brackets to the sides of the Kramer machine
- Fix the RK-19N with the machine under the table


Attaching the Brackets

You can attach the **RK-19N** brackets to all types of Kramer 19" 1U Kramer machines, as follows:

1U Device Size/Type	Screw Location	Device Position
1/2-19" 1U (extrusion)		


1U Device Size/Type	Screw Location	Device Position
1/3-19" 1U (extrusion)		
1/4-19" 1U (extrusion)		
1/4-19" 1U (extrusion) long		

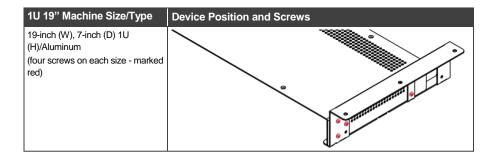

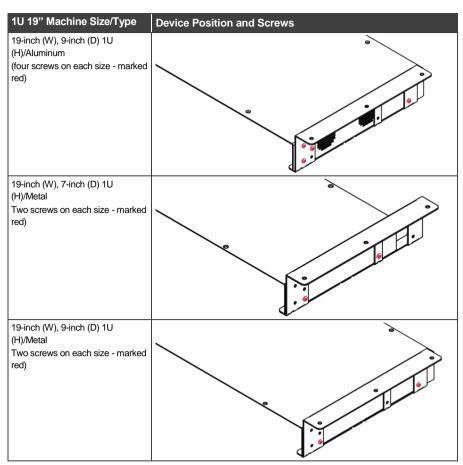

Attaching the RK-19N under the Table

- Place the unit to the underside of the table and mark the correct location.
- Insert the six 4x16 wood screws into the six rim screw holes (three on each side) and fix the **RK-19N** to the table.

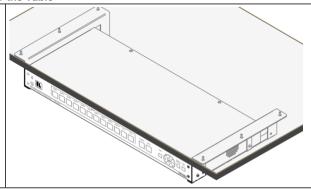

Specifications

DIMENSIONS:	Each bracket:	
	4.4cm x 22cm x 5.7cm (1.7" x 8.7" x 2.2") W, D, H	
	Space between rim holes: 10cm (3.9")	
WEIGHT:	0.35kg (0.8lbs) approx. (for the pair)	
ACCESSORIES:	Eight M3x8 screws; six 4x16 wood screws	