

KRAMER



Installation Instructions

MODEL:

T-4INSERT

Optional Insert Kit



P/N: 2900-300605



Rev: 1



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to these installation instructions may be found.

We welcome your questions, comments, and feedback.

www.kramerAV.com
info@kramerel.com

The Kramer T-4INSERT Optional Insert Kit

Congratulations on purchasing your Kramer **T-4INSERT** Optional Insert Kit.

The **T-4INSERT** Optional Insert Kit includes two blank inserts and two pass-through inserts. It lets you add 4 more inserts to the configuration of the TBUS in place of dual power sockets, thus providing you with additional design connectivity flexibility.

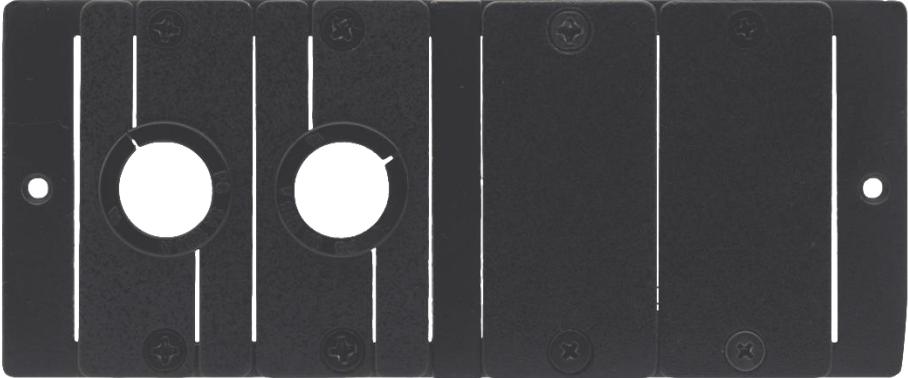


Figure 1: T-4INSERT Optional Insert Kit (P/N: 80-00006699)

Installing the T-4INSERT Optional Insert Kit

To install the T-4INSERT Optional Insert Kit:

Step 1: Place and align the Kramer **T-4INSERT** under the opening.

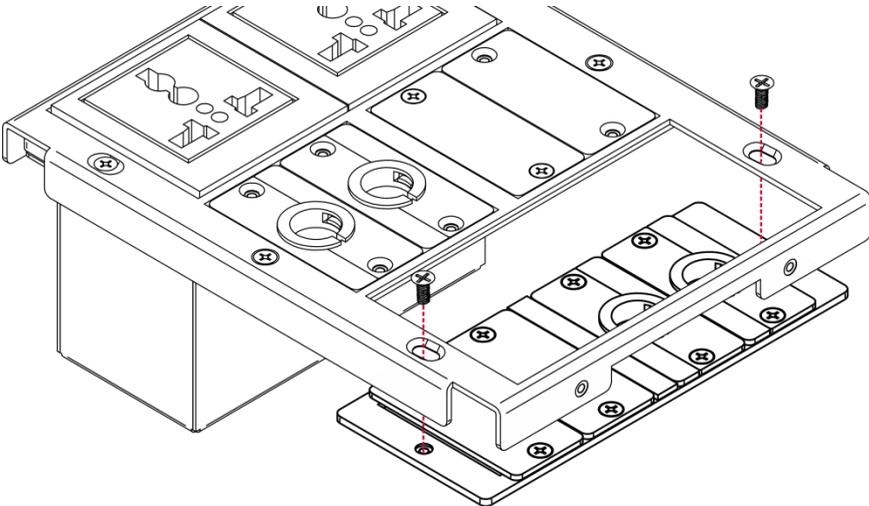


Figure 2: T-4INSERT Installation, Step 1

Step 2: Insert the two screws (supplied with the kit) to fix the Kramer insert in place, and tighten them.

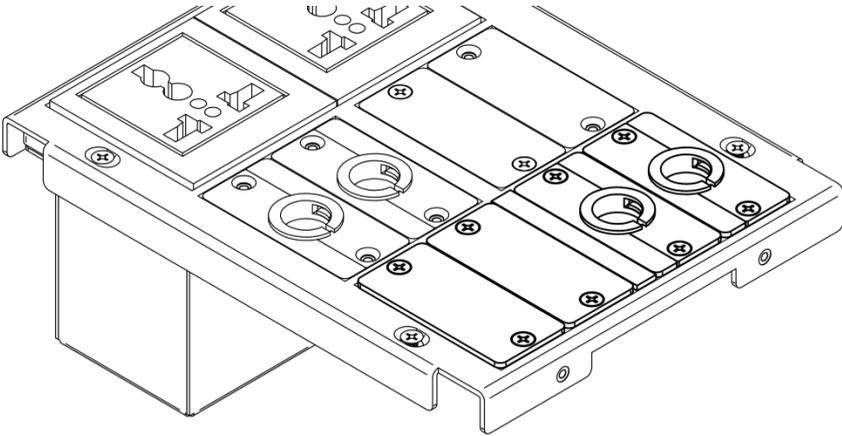


Figure 3: Tighten the Frame, Step 2

You can mount various inserts before (see [Figure 4](#)) or after (see [Figure 5](#)) installing the insert kit.

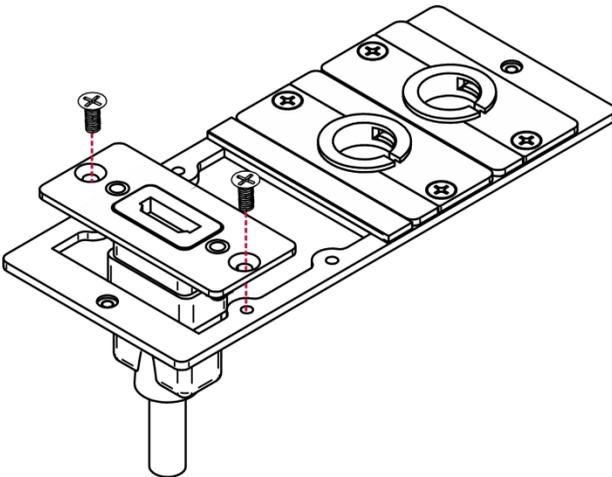


Figure 4: Mount the Inserts (Before Installing the Kit)

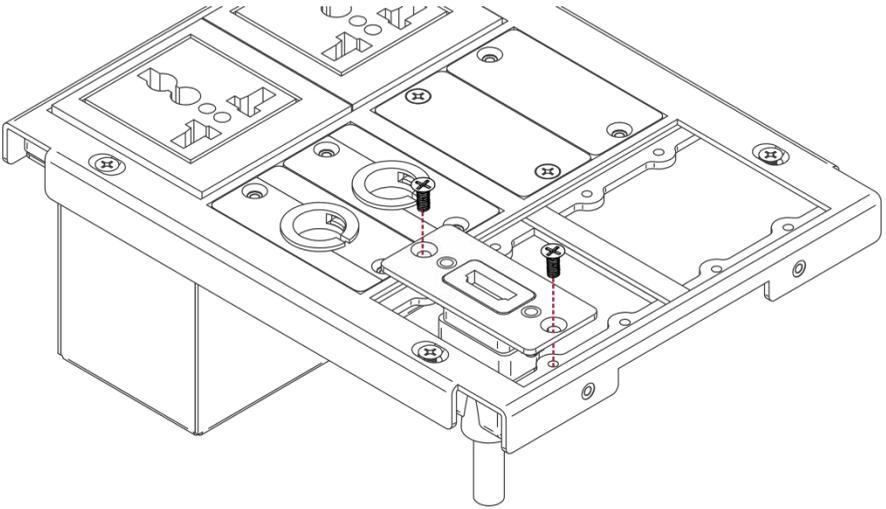


Figure 5: Mount the Inserts (After Installing the Kit)