


FIRSTECH, LLC.

CM6300 Alarm System

Installation Manual

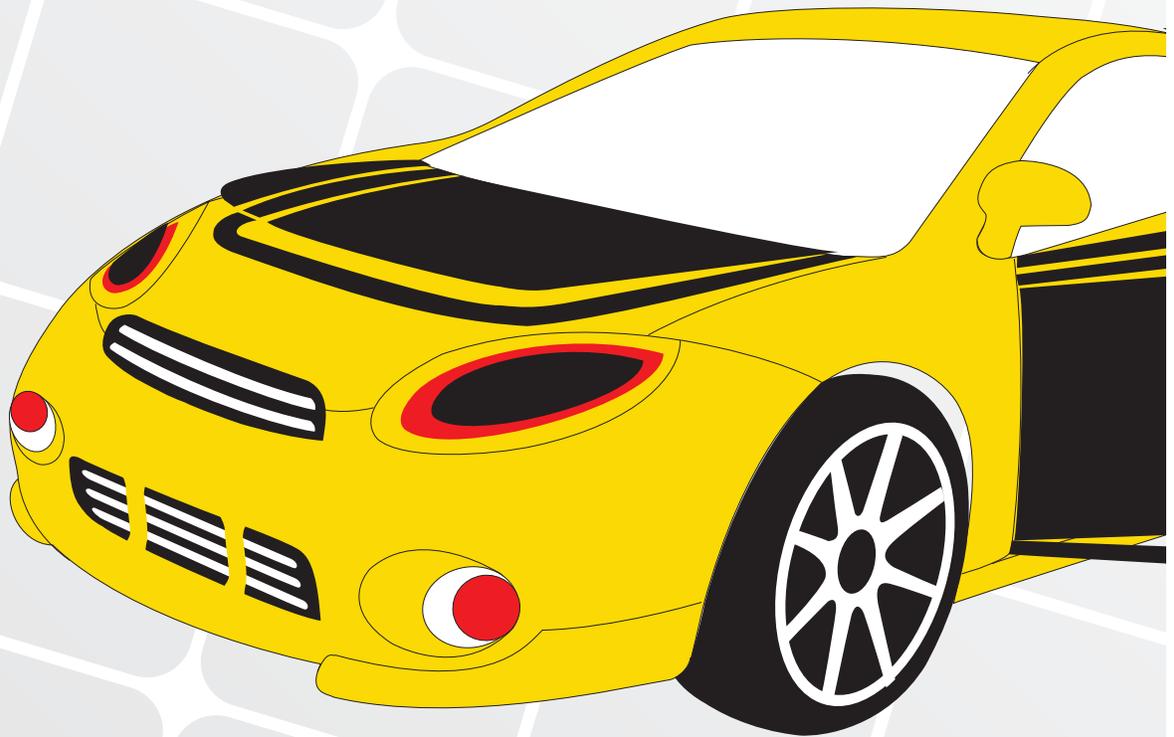

Firstech, LLC.
21903 68th Ave S.
Kent, WA 98032
Phone. 888-820-3690
Fax. 206-957-3330



Please visit www.firstechonline.com for additional installation resources

Version 7.11

Table of Contents

CM6300

| | |
|--|-----------|
| Introduction | 4 |
| Kit Contents | 4 |
| Installation Basics | 5 |
| Remote Programming Routine | 6 |
| Placement and Use of Components | 6 |
| Common Procedures | 12 |
| Wiring Descriptions | 13 |
| Option Programming Tables | 20 |
| Option Menu Descriptions | 22 |
| Special Option Groups 1 & 2 | 27 |
| Option Programming | 27 |
| Troubleshooting | 31 |
| Frequently Asked Questions | 31 |
| Technical Support Contacts | 32 |

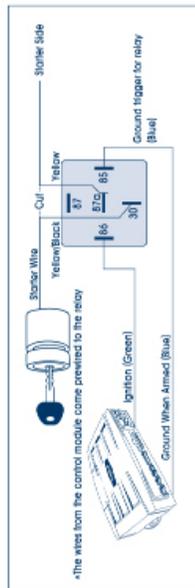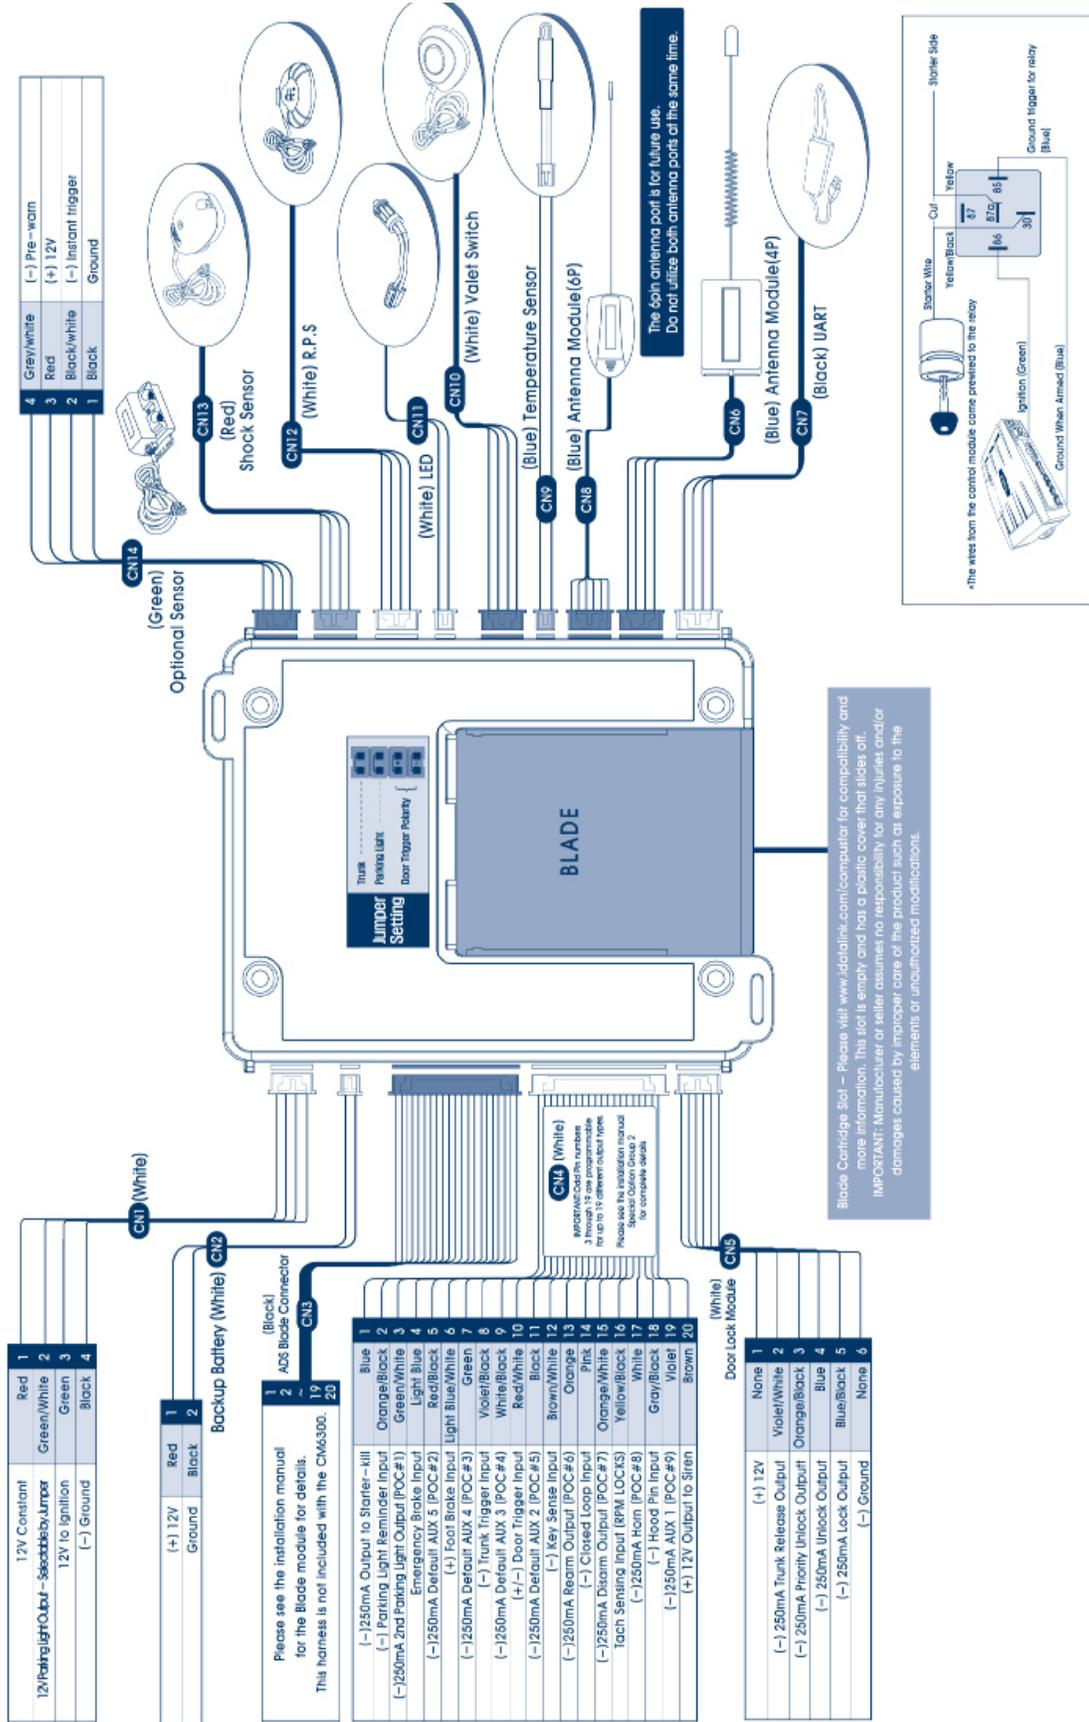

Introduction

CM6300

Thank you for purchasing this Firstech system for your vehicle. The following installation manual is intended for experienced and authorized Firstech technicians. We highly recommend that you contact your local Firstech dealer and seek professional installation. Call 888-820-3690 or visit our websites at www.compustar.com or www.firstechllc.com to locate your nearest dealer. If you need additional or replacement remotes and / or online support please visit www.compustar.com/dealersupport.



Caution: The Manufacturer's warranty will be void if this product is installed by anyone other than an authorized Firstech dealer. Firstech reserves installation support services to authorized dealers only.

This manual may change frequently. Please check www.compustar.com/dealersupport for updates.

Kit Contents

CM6300

All Firstech FT-6300A CONT controllers include the following:

- CM6300 main control module
- Wiring diagram sheet
- Main wiring harness
- Wiring harnesses
- Hood pin
- Mountable bright blue LED
- Firstech dual stage shock sensor

RF Kits with remote(s), Antenna, and Antenna Cable are not included with the FT-6300A CONT.

The following sensors are available but **not included** with every system:

- Auto lock and unlock system (FT-EZGO)
- Remote pager sensor (FT-RPS TOUCH) or (FT-RPS-2)
- Firstech secure valet switch (FT-VALET GREY)
- Thermister temperature sensor (FT-TEMP SENSOR) (2 Way LCD remote systems only)
- DAS sensor (FT-DAS)

The remote(s) and antenna are modular and are not specific to the control modules. You have the ability to pair almost any Firstech remote(s) and antenna receiver to the CM6300. This includes all 4 and 6 pin antennas.

Any questions on contents please contact your distributor or us directly at 1.888.820.3690, Monday through Friday, 8 AM to 5 PM Pacific Time.

Installation Basics

CM6300

If you are new to installing Firstech Series Remote Starts and / or Alarms, we highly recommended that you thoroughly review this manual to installing your first unit.

Key Points to Consider Before Installation:

You must code remotes to this system before anything will function. Program remotes by cycling the ignition ON / OFF five times within seven seconds and tap button 1 (half second) on the first remote, and then tap button 1 (half second) on the second remote.

RPS Touch (Touch Remote Paging Sensor):

The optional RPS that has four main functions; (1.) Status LED, (2.) Remote notification when triggered, (3.) Auto unlock/alarm disarm when a user specific 4 digit knock code is entered via tapping sensor through the windshield. (4.) You can also relock your vehicle if equipped with an RPS Touch sensor.

DAS Sensor:

The DAS sensor monitors forward movement for remote starting manual transmissions, dual stage impact, and auto adjusting tilt sensor. See the DAS Sensor section of this manual for details.

Supports 4 Pin and 6 Pin Antennas

The CM6300 supports both Firstech 4 Pin and 6 Pin antennas. This will work with all new RF kits as well as the current ones. Do not have antennas plugged into both ports on the CM6300 as the remotes will not function properly.

Supports Blade

The CM6300 supports the Blade AL and TB systems as well as 2 way data for Idatalink and Fortin bypass modules. The data port will also support full data connection with DroneMobile.

New Option Menus:

It is important to familiarize yourself with all the options as it will save time in most applications. For instance, Option 1-04 controls the double pulse unlock feature on all CM6 series control modules.

Programmable Output Channel (POC)

Must have Option Programmer OP500

All control modules come with 9 programmable outputs that can be configured 19 different ways. It is important to familiarize yourself with the POCs as it will save time in most applications. Note that the CM6300 POCs are defaulted to Aux 1-5 as shown in the Special Option Group Table 2.

Internet updatable processors

Visit www.firstechonline.com

All CM6 series units are equipped with some of the most powerful processors available today. This flexibility allows for on-demand internet updating capabilities in the event of a version update or change. All CM6 series control modules use the same version firmware.


Remote Programming Routine

CM6300

IMPORTANT: Any and all remotes must be coded to the control module prior to performing any and all operations.

STEP 1: Activate programming mode by manually turning the vehicle's key between the Ign On and Off (or the Acc & On positions) five times within 7 seconds. The vehicle's parking lights will flash once with the successful completion of this step. (Note: this step also places the control module into Valet Mode)

STEP 2: Within a 2 second period after the 5th ignition cycle tap Button 1 on two way remotes or the Lock button on one-way remotes for 0.5 seconds. The parking lights will flash once to confirm the transmitter has been coded. Repeat for additional remotes, up to three.

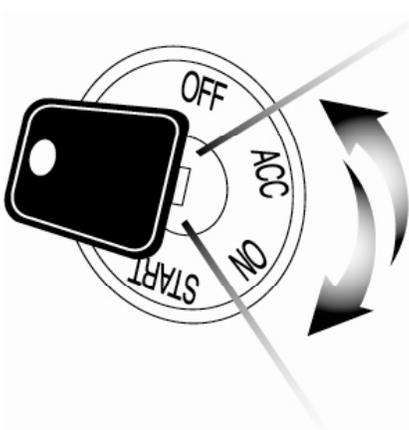

Exiting Programming: Programming is a timed sequence. After 2 seconds the parking lights will flash twice signaling the end of programming mode.

Programming Multiple Remotes: After the confirmation flash given in STEP 2, code additional remotes by tapping Button 1 on two way remotes or the Lock button on one way remotes. The parking lights will flash once confirming each additional remote. All systems can recognize up to three remotes.

Note: If you do not program any remotes and enter this sequence it will put the system into Valet Mode. Only the keyless entry will work in Valet Mode. To exit Valet Mode just program remote(s).

Placement and Use of Components

CM6300

IMPORTANT: The placement and use of components are critical to the performance of this system.

Antenna and Cable

Firstech antennas are calibrated for horizontal installation at the top of the windshield. The cable that connects the antenna to the control module must be free from any pinches or kinks. Installing the antenna in areas other than the windshield may adversely affect the effective transmitting distance of the remotes.

Placement and Use of Components

CM6300

RPS Touch and RPS (Remote Paging Sensor)

The RPS is an optional feature. The car call/RPS feature uses a small sensor that is mounted on the inside of your windshield. **Important: When using the RPS Touch, you cannot use the LED port or Secure Valet Switch.**

RPS Touch (Remote Paging Sensor)

The new RPS touch has multiple features including: remote paging, 4 digit pin unlock/disarm, and arm/lock. All features are operated with a simple touch of the sensor.

Please program Option 3-16 to Setting 2.

RPS Touch and car call functions do not require programming, however in order to unlock/disarm your vehicle you must program a 4 digit passcode (numbers 1 through 10 only) using the instructions below:

STEP 1: Choose your RPS Touch 4 digit code. '0' is not available.

STEP 2: Turn ignition to the 'ON' position and leave driver's door open.

STEP 3: Hold your finger over the 'Red Circle' icon for 2.5 seconds.

STEP 4: When the siren chirps and LEDs flash in a circular pattern, tap on your first number. (Hold the number for 2.5 seconds to choose 6 through 10.) After choosing your first number you will get one siren chirp and LEDs will flash in a circular pattern.

STEP 5: Repeat Step 4 until all four digits are set. You will get 1 siren chirp and 1 parking light flash. Repeat Steps 2 - 5 if you get 3 chirps and light flashes. Your RPS Touch is now programmed.

Alarm rearm and lock

To rearm hold your finger on the 'Red Circle' for 2.5 seconds.

Alarm disarm and unlock

To disarm hold your finger over the 'Red Circle' for 2.5 seconds. Once the LEDs start their circular pattern, enter your 4 digit code. (Refer to Step 4 above.) Two seconds after entering the 4th digit, your system will disarm.

Placement and Use of Components

CM6300

2 Way LCD remote paging

To page a 2 Way LCD remote just tap the 'Red Circle' twice.

Touch Panel Sensitivity

To change touch sensitivity open the driver's door, hold the button on the back of the RPS Touch until the LEDs go out. Release button and tap again. The number of solid LEDs represent sensitivity of touch, 1 being the lowest, 5 the highest.

RPS Touch On or Off

You can turn the RPS Touch off from your remote. Just follow the instructions below:

STEP 1: Enter remote programming mode by holding down buttons 2+3 (Trunk and Key/Start buttons on 2W901R-SS) simultaneously for 2.5 seconds. The remote will beep once and the LCD or read "REMOTE MENU" indicating that you have entered programming mode.

STEP 2: Scroll through the remote options by taping button 3 or 4 (Function button 2W901R-SS). Once the LCD RPS icon flashes reads "RPS-ON" tap button 1 or (Lock button 2W901R-SS) to turn this feature on. The LCD will read "RPS-OFF"

STEP 3: Exit remote programming by holding down buttons 2+3 (Trunk and Key/Start 2W901R-SS) buttons simultaneously for 2.5 seconds. The remote will beep indicating that you have successfully exited programming.

RPS (Remote Paging Sensor) Unlock/Disarm

RPS and car call functions do not require programming, however in order to unlock/disarm your vehicle you must program a 4 digit passcode (numbers 1 through 10 only) using the instructions below:

STEP 1: Disarm/unlock the alarm (remote must be programmed first) and choose a 4 digit code. You can not have zeros.

STEP 2: Turn ignition key to the "on" position and leave the driver's door open.

STEP 3: Knock on the windshield in front of the RPS a total of 5 times (each time you knock the LED on the RPS will flash RED). The LED will begin to flash rapidly in BLUE with successful completion of this step.

STEP 4: Enter the first digit of the desired four digit pass code by knocking on the windshield in front of the RPS the desired number of times. For example, to enter 3, knock on the sensor 3 times (each time you knock the LED will flash RED) then wait.

Placement and Use of Components

CM6300

STEP 5: The LED on the RPS will confirm your first number by flashing BLUE slowly. Once the LED begins to flash rapidly in BLUE, enter your second number by repeating step 4.

STEP 6: Repeat steps 4 & 5 to enter all four numbers.

STEP 7: Turn the ignition OFF - the RPS disarm/unlock passcode is now programmed. Follow steps 3 – 5 to enter your disarm/unlock code.

Alarm rearm and lock

To rearm, knock on your sensor 5 times.

Alarm disarm and unlock

To disarm, knock on your sensor 5 times. Wait for the Blue LEDs to flash rapidly. Follow STEP 4 and 5 above to enter your 4 digit passcode.

2 Way LCD remote paging

To page a 2 Way LCD remote just knock on the RPS twice.

Knock Panel Sensitivity

To change knock sensitivity, disarm the system and adjust the switch on the rear of the RPS. The larger the circle, the more sensitive the knock sensor is.

Secure Valet Switch (Not available when using RPS Touch)

The optional Secure Valet Switch prevents the alarm from being put into valet mode through cycling the ignition on/off five times. The Secure Valet Switch is more secure than traditional toggle / valet switches because it requires a two digit code. To program this feature you must perform the following procedures:

STEP 1: Turn on Option 3-10-III.

STEP 2: Turn ignition key to the "on" position.

STEP 3: Hold down the valet switch for 1.5 seconds. The LED on the valet switch will begin to flash rapidly with successful completion of this step.

STEP 4: Enter the first digit of the desired two-digit pass code by depressing the switch the number of times that coordinates with the desired first number. For example, to enter 3, depress the switch 3 times, then wait.

STEP 5: The LED will confirm the first number by flashing BLUE slowly. Once the LED begins to flash rapidly, enter your second number by repeating step 4.

STEP 6: Turn the ignition off - the Secure Valet Switch is now programmed. Follow steps 3 – 5 to enter your Secure Valet code.

****The first two digits of the RPS unlock/disarm pass code will be the default pass code for the Secure Valet (you do not need to program them independently).**

Placement and Use of Components

CM6300

DAS Sensor

The DAS sensor monitors forward movement for remote starting manual transmissions, dual stage impact, and auto adjusting tilt sensor. Follow the steps below to properly setup your DAS sensor.

Installing Your DAS

STEP 1: Set Option 4-12 to Setting 2

STEP 2: Set switch 1 and 2 on the side of the DAS. *See below for explanation or switches.

STEP 3: Connect cable to the red 4 pin port on the CM6 Series module.

STEP 4: Mount DAS securely using zip ties or included hardware. Can be mounted in any orientation. Tilt will set 30 seconds after arming.

| | | | |
|-----------|-----------------------|-----------|-----------------------|
| Switch 1: | ON - 3 Degree Tilt | Switch 2: | ON - 4 Inch Movement |
| | OFF - 1.5 Degree Tilt | | OFF - 3 Inch Movement |

Adjusting DAS Shock Sensitivity (CM6000 or CM6300)

STEP 1: Turn the ignition to the 'on' position.

STEP 2: 2 Way remotes-hold buttons 1 and 2 (Lock and Unlock) for 2.5 seconds. You will get two parking light flashes. 1 Way remotes-hold Lock and Unlock for 2.5 seconds. You will get two parking light flashes.

STEP 3: To set the Warn Away Zone 1, tap button 1. (1 Way: Lock) After you get one parking light flash, tap the vehicle. You will get siren chirps 1-most sensitive through 10-least sensitive. This sets the impact sensitivity of Warn Away Zone 1. **Setting Zone 1 will automatically set Zone 2. If you would like to manually set Zone 2 proceed:**

To set Instant Trigger Zone 2, tap button 2. (1 Way: Unlock) After you get two parking light flashes, tap the vehicle. You will get siren chirps 1-most sensitive through 10-least sensitive. This sets the impact sensitivity of Instant Trigger Zone 2.

STEP 4: Once you get two parking light flashes, you are ready to test your DAS.

Testing The DAS Sensor

STEP 1: Turn the ignition off and Arm/Lock the system.

STEP 2: Wait 30 seconds then test the impact sensitivity.

Firstech Shock Sensor

For best results mount the shock sensor by zip tying it to the vehicles main ignition harness. You can also use the supplied mounting hardware to mount your sensor. There is a small dial on the sensor that ranges from Off to 10. The higher the number on the dial the greater sensitivity of impact. A small adjustment to the dial can make a significant difference in sensitivity for both 1st and 2nd stages. Recommended dial settings for most vehicles is somewhere between 2 & 4.

Siren

To adjust duration time when the alarm has been triggered, change Option 3-07 – the system default is 30 seconds.

FT-EZGO Setup

The FT-EZGO from Firstech will unlock/disarm the vehicle when in range. It will also lock/arm and unlock/disarm the vehicle when you press the button on the EZ100-R.

Installing The FT-EZGO

STEP 1: Flash your CM6 Series control module for FT-EZGO compatible firmware.

STEP 2: Set Option 1-14 to Setting 2, 3 or 4

STEP 3: Connect included 6 Pin to 6 Pin with Ground Wire to control module. If connecting to a 4 Pin to 4 Pin antenna, use the included 6 Pin to 4 Pin adapter.

STEP 4: Connect the ground wire from the included 6 Pin to 6 Pin cable to vehicle's ground. **Warning: Failure to connect this wire WILL result in damage to your FT-EZGO antenna (ANT-RFID).**

STEP 5: Connect your antenna to the ANT-RFID. This is the blue 6 Pin port. If you have a 4 Pin antenna cable, use the included 4 Pin to 6 Pin adapter.

STEP 6: Find a spot to mount your ANT-RFID on the windshield. This is recommended for optimum range. For more specific mounting location information visit us at www.firstechonline.com under the Authorized Tech section document titled: "FT-EZGO Recommended Mounting Locations."

STEP 7: Program your EZ100-R and additional RF Kit remotes to the control module (Maximum 3 Remotes including EZ100-R).

You are now ready to test your FT-EZGO system.

Testing The FT-EZGO

STEP 1: Turn the auto unlock feature by holding the button on the EZ100-R for at least 8 seconds. You will get one parking light flash and/or siren chirp. Hold the button again for at least 8 seconds and you will get two parking light flashes and/or chirps showing that the auto unlock feature is off.

STEP 2: Arm/Lock the vehicle and wait at least 15 seconds.

STEP 3: Walk up to the vehicle and it will automatically unlock/disarm. If you have the option set, walk away and the vehicle will lock and arm.

Thermister (Temperature Sensor)

Every 2 Way LCD Firsttech RF kit includes an optional thermister, which must be plugged into the 2 pin port of the control module for use. This plug is blue on the CM6300. The use of the thermister allows the 2 Way remote to display the vehicle's interior temperature on the remote LCD (liquid crystal display) **IMPORTANT:** New thermister plugs are blue 2 pin connectors on the CM6 series but old white plug thermistors will still work.

Hood Pin

The hood pin switch triggers the alarm in the event the hood is opened while the system is armed.

Backup Battery

The backup battery input on the control module / brain is for any optional battery backup unit (FT-BATT BACKUP). The red positive lead (+) acts both as an input and charging output for a 12 Volt battery backup. A backup battery maintains basic alarm functionality when main vehicle power is lost. See the wiring schematic section for complete details. Do not power any other modules or DroneMobile off this port as it will not support a heavy load of current.

Common Procedures

CM6300



Jumper Settings

Caution: Jumper settings affect the polarity and use of certain outputs. If these jumpers are used incorrectly, damage to the vehicle and/or control module may occur.

Jumper 1 (Door Trigger Polarity)

Determines the polarity of the door trigger input wire (red/white). In the default position the door trigger registers negative (-) triggers. To change to a positive (+) trigger, move the jumper.

Jumper 2 (Parking Light to Trunk Output)

Determines the output type (not polarity) of the green/white wire on connector one (CN1). In the default position it provides a positive (+) parking light output. To change to a positive (+) trunk output move the jumper. A negative (-) parking light output is found on connector three (CN3) and a negative (-) trunk output is found on connector four (CN4).

Setting Auxiliary Outputs on Connector 4

You Must Have the OP500 Option Programmer

For your convenience certain wires are defaulted to Auxiliaries. However to set specific auxiliary outputs on the control module, you must choose two odd pin wires on the black 18 pin connector that you are not using. For example we will use POC 8 and 9.

STEP 1: Plug in OP500 and use the Right or Left Arrow Button to scroll through the menu to POC 8 and POC 9 on LCD Line 1.

STEP 2: Use the Up or Down Arrow Button to change the lower number on LCD Line 2 to 10 – Auxiliary 1 or 11- Auxiliary 2.

STEP 3: Scroll up the menu to Option 4-01 and 4-02 and set the options. Please see the Option Table for details.

STEP 4: The control modules have a secure auxiliary option 4-05. This requires you to tap button 4 before you tap button 2 for Aux 1 or button 3 for Aux 2. On 1-Way remotes you must hold the Trunk and Key/Start buttons for 2.5 seconds then tap the Trunk button for Aux 1 or the Key/Start button for Aux 2.

STEP 5: If you need to change the time settings of the outputs go to AU1 or AU2 on the OP500. LCD Line 2 is the timed output.

STEP 6: Hold the "W" Write button for 3 seconds to set all the options.

Version Diagnostics

All the new control modules come with the ability to check which firmware is on the module. This is accomplished by turning the ignition on. Then with 2 Way remotes you must hold buttons 1 and 4 together for 2.5 seconds. With the 1 Way remotes you must hold the Lock and Key/Start buttons together for 2.5 seconds.

Blade Cartridge Slot and Connector

The slot gives you the ability to use the Blade-AL and Blade-TB modules from Firstech and ADS. With these modules you can virtually eliminate all wire connections between your control module and bypass module. You only need to connect the main ignition harness and your required wires on the 20 pin Blade connector. For more information on how to program and wire the Blade please visit www.idatalink.com for the specific wiring diagram for that vehicle.

The CM6 Series Blade connector has a locking tab. Older blade harnesses will work but you must cut the notches on the black harness plug off.

Blade system includes:

1. Blade-AL or Blade-TB (NOTE: These modules are blank and must be flashed on your computer.)
2. 20 Pin locking wiring harness
3. 3 Pin harness used in some installs

IMPORTANT: Install diagrams are not included and must be downloaded from www.idatalink.com/compustar. When flashing the Blade you can use the Y-Cable OP500 end and not CM4 Series end. ADS and Firstech recommends using the 4 pin RS232 cable to avoid confusion. Cartridge must be removed to flash the control module firmware.

NOTE: The ADS-RNG C1, ADS-RNG C2, and ADS-RNG GM3 are not included and must be purchased separately. The 20 pin Blade connector comes only with the Blade cartridge and not the CM6 control modules.



WARNING: Manufacturer or seller assumes no responsibility for any injuries and/or damages caused by improper care of the product such as decomposition, conversion, and transform done by a user voluntarily.

WARNING: There should be no wiring routed around any pedals which can cause a driving hazard.

Connector 1 (CN1), 4-Pin

Pin 1 Red - Constant 12V positive (+) power input. This wire must be connected. The proper vehicle wire will test (+) 12V at all times while the key is in the off position, the on position and during crank.


Pin 2 Green/White – This is a dual-purpose wire that features selectable functionality thru the trunk/light jumper on the control module. It is either a positive (+) parking light output or positive (+) trunk output. This wire carries a 10 amp fuse.

Default - Parking light positive (+) output. The proper vehicle wire will test (+) 12V when the parking light switch is in the on position.

Optional – Trunk release positive (+) output. The proper vehicle wire will test (+) 12V when the trunk release is triggered.

Pin 3 Green – Ignition 12V positive (+) input. This wire must be connected to the vehicles ignition for valet/programming. The proper wire will test 0V with the key in the off position, 12V (+) while the key is in the on position and 12V (+) during crank. This pin also has a thin green wire that is prewired to the starter kill relay. If you are not installing starter kill, you do not need to use the included relay.

There are two wires coming off of the relay; yellow-black and yellow. To utilize the starter-kill feature, the vehicle's starter wire must be cut in half, otherwise, cut the relay out of the harness. The starter kill relay has a thin 24 gauge blue wire. This must be connected to pin 1 (24 gauge blue wire) on Connector 3.

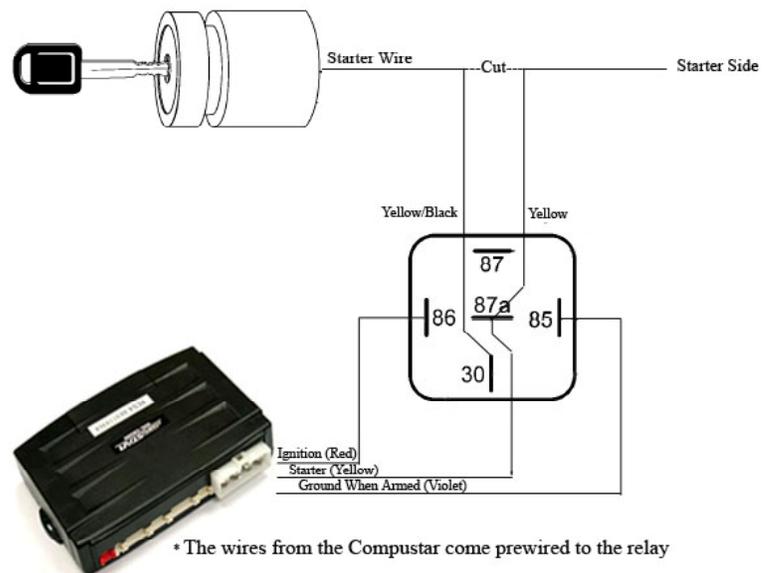

IMPORTANT: For starter-kill applications, the yellow wire goes to the starter side of the vehicle's starter wire and the yellow/black goes to the key side.

Pin 4 Black - Ground negative (-) input. This wire must be connected to the vehicle's ground.

Connector 2 (CN2), 2-Pin: Optional Battery Back-up

Pin 1 Red - Constant 12 V positive (+) input and (+) charging output.

Pin 2 Black - Ground (-) negative input.

Connector 3 (CN3) , 20 Pin Blade Connector - New Generation

This connector is used only if you are installing a Blade-AL or Blade-TB. The wiring harness for this connector also comes with the Blade cartridge. Please refer to the Blade install guide for wire description. The new generation 20 pin Blade connector now has a locking tab. The old connector with out a locking tab is compatible but you must modify the connector.

Connector 4 (CN4), 20-Pin: Programmable Output Connector (POC)

IMPORTANT: Odd Pin numbers 1 through 17 are programmable for up to 19 different output types. Refer to Special Option Group 2 for complete details.

- Pin 1 Blue - 250mA negative (-) output when armed and during remote start (while running). This wire has a connector and must plug into same wire at the starter-kill relay. Caution: When this wire is being used to trigger aftermarket accessories it must be diode isolated.
- Pin 2 Not Used
- Pin 3 Green/White [POC 1] - Parking light 250mA negative (-) output. The proper wire will test (-) when the parking light switch is in the on position.
- Pin 4 Not Used
- Pin 5 Red/Black [POC 2] - Auxiliary 5 250mA negative (-) output. This is an optional output that will provide a programmable output to trigger sliding doors, power windows or whatever other features you'd like.
- Pin 6 Light Blue/White - Foot brake (+) input. This is used for option 1-09: Igniton controlled door locks setting 2 which will let the doors lock when brake is pressed.
- Pin 7 Green [POC 3] - Auxiliary 4 250mA negative (-) output. This is an optional output that will provide a programmable output to trigger sliding doors, power windows or whatever other features you'd like.
- Pin 8 Violet/Black - Trunk negative (-) input. This is an optional input that will monitor when the vehicle's trunk has been opened. The proper wire will provide a (-) trigger while the trunk is open.
- Pin 9 White/Black [POC 4] - Auxiliary 3 250mA negative (-) output. This is an optional output that will provide a programmable output to trigger sliding doors, power windows or whatever other features you'd like.
- Pin 10 Red/White - Door trigger input. This wire monitors negative (-) or positive (+) trigger door-pins. The proper wire will provide a (-) trigger or a (+) trigger only when the doors are opened. You will need to test the wire for proper polarity and set door dip switch on the control module for the corresponding polarity.

- Pin 11 Black [POC 5] – Auxiliary 2 250mA negative (-) output. This is an optional output that will provide a programmable output to trigger sliding doors, power windows or whatever other features you'd like.
- Pin 12 Brown/White - This wire looks for key sense negative (-) input. The proper wire will show a (-) trigger only when the key is in the ignition. The purpose of the key sense is to prevent the system from passively arming or relocking while the key is still in the ignition.
- Pin 13 Orange [POC 6] - Factory Arm 250mA negative (-) output. This is an optional output that will provide a (-) pulse during lock, after crank and again after the ignition shuts down.
- Pin 14 Pink - Closed Loop negative (-) input. This wire acts as an instant trigger when separated from ground (-). It is most commonly used to protect headlights or trailers.
- Pin 15 Orange/White [POC 7] - Factory Disarm 250mA negative (-) output. This is an optional output that will provide a (-) pulse during unlock and prior to the ignition turning on.
- Pin 16 Yellow/Black - Tach Sense input. Connect this wire to a tach source for Ignition controlled door locks. This is option 1-09: setting 3. The doors will lock once the rpms double from what they are programmed at.
- Pin 17 White [POC 8] - Horn honk 250mA negative (-) output. This is an optional output that will pulse the factory horn. The proper wire will show ground (-) while the horn is sounding. To change horn output settings, review Options 3-8 and 3-9.
- Pin 18 Gray/Black – Hood Pin negative (-) input. This input is a safety shut down and alarm trigger. It triggers the alarm if the hood is opened while the it is armed. You can connect this wire to the hood pin supplied with this kit, or to a wire in the vehicle that shows (-) only while the hood is open.
- Pin 19 Violet [POC 9] - Auxiliary 1 250mA negative (-) output. This is an optional output that will provide a programmable output to trigger sliding doors, power windows or whatever other features you'd like.
- Pin 20 Brown - Siren 12V positive (+) output. Connect this wire to the (+) wire located on the siren. To change siren output settings, review Option 3-7.

Connector 5 (CN5), 6-Pin

Pin 1 Not used

Pin 2 Violet/White - Trunk release 250mA negative (-) output. This is an optional output that will release the trunk. Use CN1, Pin 2 if the vehicle is equipped with a (+) trunk release. System will unlock doors and disarm alarm prior to trunk release.

Pin 3 Orange/Black - 2nd Unlock 250mA negative (-) output. This is an optional output that will provide a (-) pulse for driver's priority door lock. **IMPORTANT:** You must isolate the driver's door and turn on Option 1-3.

Pin 4 Blue - Unlock 250mA negative (-) output. This is an optional output that will provide a (-) pulse for unlocking doors. System will unlock doors and disarm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems. For additional lock settings review Option Group 1.

Pin 5 Blue/Black - Lock 250mA (-) negative output. This is an optional output that will provide a (-) pulse for locking doors. System will lock doors and arm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems. For additional lock settings review Option Group 1.

Pin 6 Not used

Connector 6 (CN6), 4-Pin (RS 232 Data Port)

This connector is used for updating control modules via www.compustar.com. You must also use this port to flash Blade bypass modules. This port provides simple connectivity of Fortin and iDataLink bypass modules.

This port is also used to communicate with DroneMobile controllers. Make sure to use the data port from the DroneMobile unit to this RS232 port.

Connector 7 (CN7), 4-Pin to 4-Pin or 6-Pin (Pre-wired Antenna Cable)

Connect your antenna cable to this port. You can only use 4 to 4 pin or 4 to 6 pin antenna cables. 6 to 6 Pin antenna cables do not work. Do not use both Connector 7 and Connector 8 at the same time.

Pin 1 Yellow - RX input. This wire receives the signal from remote.

Pin 2 White - TX output. This wire transmits the signal to remote.

Pin 3 Red – Constant 12V positive (+) output.

Pin 4 Black – Negative (-) ground.

Connector 8 (CN8), 6-Pin to 6-Pin (Pre-wired Antenna Cable)

Connect your antenna cable to this port. You can only use 6 to 6 pin antenna cables. 4 to 4 or 4 to 6 Pin antenna cables do not work. Do not use both Connector 9 and Connector 10 at the same time.

Connector 9 (CN9), 2-Pin (Pre-wired Thermister)

Plug optional thermister into this connector to monitor the vehicle's temperature. It is used to display temperature on two-way LCD's. To use Timer Start features review Option Group 2. **IMPORTANT:** New Thermister plugs are blue 2 pin connectors on the CM6 series but old white plug Thermisters will still work.

Pin 1 Black - Thermister

Pin 2 Black/White - Thermister

Connector 10 (CN10), 3-Pin (Pre-wired Valet/Programming Switch)

Pin 1 Gray/Black - Negative (-) ground.

Pin 2 Gray – 3V positive (+) L.E.D. output.

Pin 3 Gray – Negative (-) output.

Connector 11 (CN11), 2-Pin (Pre-wired LED)

Note: Do not mistake for Thermister port.

Pin 1 Black - L.E.D negative (-) ground.

Pin 2 Black/White- L.E.D. 3V positive (+) output.

Connector 12 (CN12), 4-Pin (Pre-wired RPS)

Pin 1 Black - Negative (-) ground.

Pin 2 White - Negative (-) paging input.

Pin 3 Red - 12V positive (+) output.

Pin 4 Yellow - 9V positive (+) L.E.D. output.

Connector 13 (CN13), 4-Pin (Pre-wired Shock Sensor or DAS Sensor)

Pin 1 Black - Negative (-) ground.

Pin 2 White - 2nd stage negative (-) input. (Instant trigger)

Pin 3 Red - 12V positive (+) output.

Pin 4 Yellow - 1st stage negative (-) input. (Warn away)

Connector 14 (CN14), 4-Pin (Optional Sensor Input)

This connector provides optional sensor inputs. Most commonly used with proximity and tilt sensors.

Pin 1 Black – Negative (-) ground.

Pin 2 Black/White - 2nd stage negative (-) input. (Instant trigger) (Arm)

Pin 3 Red – 12V positive (+) output.

Pin 4 Grey/White - 1st stage negative (-) input. (Warn away) (Disarm)

Option Programming Tables

CM6300

| Option Group 1 | | | | | |
|-----------------------|--|---|--|---|--|
| | Feature | Default Setting - I | Optional Setting - II | Optional Setting - III | Optional Setting - IV |
| 1-02 | Lock / Unlock pulse duration | 0.8 sec | 2.5 sec | 0.125 sec | 3.5 sec |
| 1-03 | Driver's priority unlock | Off | On | | |
| 1-04 | Double pulse unlock | Off | Unlock | Lock | Both Lock and Unlock |
| 1-07 | Unlock / Disarm With Trunk Release | Unlock, Factory Disarm, and Trunk Release | Factory Disarm, Trunk Release Only | Trunk Release Only | |
| 1-08 | Passive Mode | Off | Passive Locking with Passive Arming | No Passive Locking with Passive Arming | |
| 1-09 | Ignition controlled door locks | Off | On | RPM Locks (Tach Sensing Mode Only) | |
| 1-10 | Auto Relock (If a door is not opened within this amount of time) | Off | 30 sec | 60 sec | 5 min |
| 1-11 | Ignition / Accessory Out Upon Unlock (Negative Out) | Off | Ignition Pulse - same timing as disarm pulse | Acc Pulse - same timing as disarm pulse | Ignition and Acc Pulse - same timing as disarm pulse |
| 1-13 | Double Pulse Disarm Output | Single Pulse | Double Pulse | | |
| 1-14 | Auto Mode | Off | FT-EZGO Unlock for FTX | FT-EZGO Unlock | FT-EZGO Lock and Unlock |
| 1-15 | Trunk Output Timing | 1 sec | 2 sec | 3 sec | 4 sec |

Option Group 2 Not Available in CM6300

| Option Group 3 | | | | | |
|-----------------------|-------------------------------------|------------------------------|------------------------------|---|--|
| | Feature | Default Setting - I | Optional Setting - II | Optional Setting - III | Optional Setting - IV |
| 3-02 | Confirmation Chirps | Medium (30 ms) | Short (15 ms) | Normal (60 ms) | |
| 3-03 | Dome Light Delay | Off | 5 sec | 45 sec | Auto |
| 3-04 | Starter-Kill Relay | Anti-Grind + Starter Kill | Anti-Grind | Anti-Grind + Passive Starter Kill | |
| 3-05 | Anti-Jacking | Starter-kill (No Anti-Grind) | Ignition-Kill | Auto kill (Auto-door locks Off) International Remotes w/ AUTO Function Only | Auto kill (Auto-door locks On) International Remotes w/ AUTO Function Only |
| 3-06 | Factory Alarm Option | On | Off | | |
| 3-07 | Siren Duration (Upon Alarm Trigger) | 30 sec | 60 sec | 120 sec | Chirps for 20 seconds |

Option Group 3 Continued

| | Feature | Default Setting - I | Optional Setting - II | Optional Setting - III | Optional Setting - IV |
|-------------|-------------------------|---|-------------------------------|---------------------------------|------------------------------|
| 3-08 | Horn Output | On Double Lock Only | On Lock and Unlock | On Lock, Unlock, and Start | On Double Lock and Start |
| 3-09 | Siren Output | On Lock, Unlock, and Start | On Double Lock Only | On Lock and Unlock | On Double Lock and Start |
| 3-10 | Valet | Key 5 times, or Remote (I+III) while Ignition is On | Key 5 times or Remote (I+III) | Secure Valet (Default code 3,3) | |
| 3-11 | Auxiliary Settings Mode | Disabled | Enabled | | |
| 3-15 | Soft Disarm | Off | On | | |
| 3-16 | RPS | RPS 2 | RPS Touch | | |

Option Group 4

| | Feature | Default Setting - I | Optional Setting - II | Optional Setting - III | Optional Setting - IV |
|-------------|---|----------------------------|------------------------------|--|--|
| 4-01 | Aux 1 output | 0.5sec | Latch | 0.5 sec Pulse + Program | Program |
| 4-02 | Aux 2 output | 0.5sec | Latch | 0.5 sec Pulse + Program | Program |
| 4-03 | Aux 1 output Control | By Remote | Arm | Disarm | Ignition Shutdown |
| 4-04 | Aux 2 output Control | By Remote | Arm | Disarm | Start |
| 4-05 | Secure Aux Output (1 and 2 Only) | On | Off | | |
| 4-06 | Auxiliary Input 1 – Green CN | Prewarn | Trigger | (-)Disarm | Open Circuit |
| 4-07 | Auxiliary Input 2 – Green CN | Trigger | Prewarn | (-)Arm | Open Circuit |
| 4-08 | Extended Accessory After Ign Shutoff (Negative Out) | Off | 10 sec | 90 sec | Until Door Open (1 min max) |
| 4-09 | Key Sense or Glow Plug input | Glow Plug Input | Key Sense Input | Disable Arm/Disarm when Brown/White Wire Triggered Same Time | |
| 4-11 | Bypass Through RS232 Port | ADS | Fortin | | |
| 4-12 | Impact Sensor | Shock Sensor | DAS Sensor | 1st Stage Disarm Input 2nd Stage Double Arm Input | 1st Stage Disarm Input 2nd Stage Arm Input |
| 4-13 | Antenna Power Save | Off | 1 Day Later | 2 Days Later | 3 Days Later |
| 4-14 | Low Battery Warning | Off | On (at 11.3 volts) | Low Battery Start (11.3 volts) | Low Battery Start (11.7 volts) |

| Special Option Group 1 | | |
|------------------------|------------------|-------------------------|
| | Feature | Setting Value (Seconds) |
| 2 | AUX1 output time | 1 ~ 100 |
| 3 | AUX2 output time | 1 ~ 100 |
| 4 | AUX3 output time | 1 ~ 100 |
| 5 | AUX4 output time | 1 ~ 100 |
| 6 | AUX5 output time | 1 ~ 100 |
| 7 | AUX6 output time | 1 ~ 100 |
| 8 | AUX7 output time | 1 ~ 100 |

| Special Option Group 2 | | | |
|------------------------|-------------------------------|-------------------------------------|---|
| | Feature | Setting and OP500 Value | |
| | Programmable Output Connector | 0 - Default Setting | 1~18 - Optional Settings |
| 1 | POC #1 | (-) 2nd Parking Light (Green/White) | 2nd Light - [1] 2nd Start - [2] 2nd IG1 - [3] 2nd Acc - [4] Status Out - [5] Rearm Out - [6] Disarm Out - [7] Horn Out - [8] Dome Light - [9] Aux 1 Out - [10] Aux 2 Out - [11] Aux 3 - [12] Aux 4 Out - [13] Aux 5 Out - [14] Aux 6 Out - [15] Aux 7 Out - [16] N/A - [17] GWA - [18] |
| 2 | POC #2 | (-) Aux 5 (Red/Black) | |
| 3 | POC #3 | (-) Aux 4 (Green) | |
| 4 | POC #4 | (-) Aux 3 (White/Black) | |
| 5 | POC #5 | (-) Aux 2 (Black) | |
| 6 | POC #6 | (-) Rearm Wire (Orange) | |
| 7 | POC #7 | (-) Disarm Wire (Orange/White) | |
| 8 | POC #8 | (-) Horn (White) | |
| 9 | POC #9 | (-) Aux 1 (Violet) | |

Option Menu Descriptions

CM6300

- 1-02 Door Lock/Unlock Pulse Duration - This feature determines the output duration of the door lock and unlock pulses. Some vehicles do not respond to short door lock/unlock pulses. This does not affect the output of the factory arm (orange wire CN3) or factory alarm disarm (orange/white wire CN3).
- 1-03 Driver's Priority Unlock - If enabled, this feature will allow the user to unlock the driver's door first, and if the unlock button is pressed again within 4 seconds, the other doors will unlock. The driver's door unlock must be isolated from the other doors and use the blue (-) unlock. The Orange/Black CN4 will be used for your 2nd Unlock output to unlock all other doors.

- 1-04 Double Pulse Unlock - If enabled, this option will cause the system to double pulse the lock, unlock or both lock and unlock outputs. This can be used for vehicles that need two pulses to unlock or relock the doors.
- 1-07 Unlock / Disarm with Trunk Release - This option allows the user to configure or disable the unlock/disarm outputs that trigger with the trunk release command.
- 1-08 Passive Mode - This option comes with default off. This feature controls what the lock wire does during passive mode. Passive must also be activated by the end user remote according to the process specified in the remote user's manual.
- 1-09 Ignition Controlled Locks - Setting 2 will lock the doors when the ignition is turned on and doors closed. Tach sensing mode must be used for setting 3. **You must also turn this feature on through the remote by tapping I+IV (2 Way remotes) or Lock+Key (1 Way remotes).**
- 1-10 Auto Relock – This option will automatically relock/rearm at the selected timed if system has been disarmed and the doors have not been opened.
- 1-11 Ignition / Accessory Upon Unlock (Negative Out) – This option will pulse the ignition wire, accessory, or both upon unlock/disarm. Most new Chrysler vehicles need the ignition and accessory pulsed to disarm the factory alarm.
- 1-13 Double pulse disarm - This feature changes the behavior of the small orange/white disarm wire. When the feature is turned on it will change the default single pulse to double pulse upon disarm/unlock.
- 1-14 Auto Mode (EZ-GO)- This feature enables the RFID EZ-GO functions according to the option selected. Once selected and the EZ-GO remote has been programmed to the Control Module the user can activate/deactivate the proximity function by holding the button on the back of the RFID remote for 10 seconds.
Option 2: will keep the EZ-GO antenna awake and allow the system to unlock every time the RFID remote is within proximity of the EZ-GO antenna regardless of the state of the control module (i.e. locked/armed or unlocked/disarmed)
Option 3: will allow the RFID remote to proximity unlock the system after it has been outside proximity of the EZ-GO antenna and the control Module has been locked/armed for at least 15 seconds.
Option 4: will allow the system to arm/lock aprox. 12 seconds after the RFID remote leaves proximity of the EZ-GO antenna and allow it to unlock the system as the user approaches the vehicle and is within the proximity of the EZ-GO antenna.
- 1-15 Trunk Output Timing - This option changes the time of the output pulse on the violet/white wire during trunk release. The default setting is 1 second. With the options you can extend the output by 2, 3 or 4 seconds to a maximum of 4 seconds.

- 3-02 Confirmation chirps- This feature will allow the user to select a shorter siren output time to simulate a quieter arm/disarm/start output.
- 3-03 Dome Light Delay – This option is used when connecting the door trigger input to the vehicles dome light circuit. It delays the door trigger input to prevent the door open icon displaying on 2 Way remotes upon lock/arm.
- 3-04 Starter-Kill – This option determines the mode of the anti-grind/starter-kill relay.
Default 1: Anti-grind + starter-kill
Option 2: Anti-grind only (no starter-kill)
Option 3: Anti-grind + passive starter-kill: starter-kill activates in 45 seconds after ignition is turned off.
- 3-05 Anti-Jacking – This option requires the starter-kill relay to be wired to the ignition vs. the starter wire.
Default 1: Acts like starter-kill: removes power from the ignition, which allows the car to crank but not start.
Option 2: Turns on anti-jacking: when the remote panics the system, power from the ignition will be removed at the end of the 30 second siren duration, thereby disabling the vehicle.
IMPORTANT: When using ignition-kill on manual transmission vehicles Option 2 will need to be utilized. Option 2 disables the anti-grind circuit while the vehicle is remote-started; if the anti-grind circuit is active and the start-kill relay is installed in the ignition, the relay will “buzz” while remote-started.
- 3-06 Factory Alarm Option- This feature is default to on, when set to option 2 the security features of the CM6300 will be deactivated leaving the keyless features functional.
- 3-07 Siren Duration (Upon Alarm Trigger) - This option changes the time that the siren sounds during alarm trigger. The available options are 30, 60, and 120 seconds. It will also sound chirps for 20 seconds as a fourth option.
- 3-08 Horn Output - This feature will change the behavior of horn output (white wire POC8 CN3).
- 3-09 Siren Output - This Feature will change the behavior of the siren output (brown wire CN3)
- 3-10 Valet – This option changes valet modes.
Default 1: Key on/off five times or remote valet (I + III for 0.5 seconds) with key in the on position.
Option 2: Key on/off five times or remote valet (I+III for 0.5 seconds) – key does not need to be in the on position.
Option 3: Secure valet: RPS Valet or remote valet (I+III for 0.5 seconds) – this option prevents the system from being put into valet via key on/off five times. To set up the RPS Valet feature, review the “Placement and Use of Components” section.

- 3-11 Auxiliary settings – The Auxiliary settings adds five additional independent auxiliary outputs for a total of seven with this option turned on. Special Option Group 1 allows for independent timing of these outputs.
- 3-15 Soft Disarm - When a vehicle has factory security, and the Firstech alarm is triggered, you may have both alarms sounding at the same time. In the default setting, silencing the Firstech system will not shut down the factory system, therefore requiring the user to first silence the Firstech system (by tapping unlock 1 time) and then unlock a 2nd time to silence the factory system. Option2 will send the Factory Alarm Disarm (orange white wire CN3 or any other POC programmed as FAD) and 5 seconds later sends rearm pulse (orange wire CN3) to ensure the doors re-lock if needed.
- 3-16 RPS - This option changes the between the option RPS 2 or the new RPS Touch. Please see the Placement and Use of Components section of this manual for details.
- 4-01 Aux 1 Output - This feature determines the duration of the auxiliary 1 output. (Option 4 allows the output duration to be set for a specific length of time 1-99 sec. only available when using the OP500)
- 4-02 Aux 2 Output - This Feature determines the duration of the auxiliary 2 output. (Option 4 allows the output duration to be set for a specific length of time 1-99 sec. only available when using the OP500)
- 4-03 Aux 1 Output Control - This feature allows the user to configure the method of which Auxiliary 1 can be activated. (Option 4 will activate AUX 1, for a set period of time based off of feature 4-01, as soon as ignition input to the CM is removed)
- 4-04 Aux 2 Output Control - This feature allows the user to configure the method of which Auxiliary 2 can be activated. (Option 4 will activate AUX 2, for a set period of time based off of feature 4-02, as soon as the CM receives the start command)
- 4-05 Secure Aux Output – This feature, in the default option should help prevent accidental activation of the AUX outputs. (2way remotes will require button IV or start button to be tapped before activating any of the AUX outputs. 1way remotes require the user to hold trunk+start buttons for 2.5 seconds before activating AUX outputs Option setting II turns this feature off.)
- 4-06 Aux 1 Input – This feature changes the input behavior of the pre-warn wire on the Aux Input Sensor green connector.
Default 1: Will pre-warn with a negative (-) ground input.
Option 2: Will instant trigger with a negative (-) ground input.
Option 3: Will disarm the alarm with a negative (-) ground input. Used when adding an alarm to a factory keyless entry system.
Option 4: Changes the output into an open circuit input.

- 4-07 Aux 2 Input – This option changes the input behavior of the instant trigger wire on the Aux Input Sensor green connector.
- Default 1: Will instant trigger with a negative (-) ground input.
Option 2: Will pre-warn with a negative (-) ground input.
Option 3: Will arm the alarm with a negative (-) ground input. Used when adding an alarm to a factory keyless entry system.
Option 4: Changes the output into an open circuit input.
- 4-08 Extended Accessory After Ignition Shutoff (Negative Output) – This option keeps the Accessory wire powered up after the ignition is shut off. This can be used to keep the radio turned on even after the key is removed from the ignition (similar to GM vehicles).
- 4-09 (-) negative Key Sense – Default setting sets the wire to off. Option 2 changes the wire to a (-) negative key sense input. Keys sense input can keep system from passive arming while the key is still in the ignition. Key sense also turns off dome-light supervision when the key is inserted into the ignition. Option 3 will provide an arm/disarm disable input wire (input polarity jumper selectable on the CM) to work with analog arm/lock disarm/unlock input (using green CN8 with CM6000-CM6300) (using red CN6 with CM6200)
- 4-11 Data to Data interface protocol through RS232 Port – Default setting allows for compatibility with ADS Idatalink modules. Option 2 changes compatibility to Fortin interface modules. (If a Fortin Module is connect to the RS232 before the CM is powered up the this feature will automatically switch to option 2)
- 4-12 Impact Sensor - This feature changes between the standard included shock sensor and the optional DAS (Digital Adjustable Sensor). The DAS has additional programming. Please see the Placement and Use of Components section of this manual for details.
- 4-13 Antenna Power Save - Some people may not drive their vehicle very often, this may cause the battery to become discharged because it is not getting recharged on a regular basis. The antenna power save option will turn off the antenna after the specified amount of time to conserve power. While the antenna is asleep, the system will not respond to the remotes. Any type of input to the system will wake up the antenna, i.e.: ignition, brake, door, trunk, hood, shock, RPS, etc. A remote start only user just needs to open their door to reactivate the system, however, a user with an alarm or alarm/start system will need to trigger the pre-warn stage of the shock sensor to quietly wake up the antenna. (This feature is not available when using EZ-GO)
- 4-14 Low Battery Warning - This feature option, which is default to off when the system is armed and the feature is on the main control unit, will monitor the voltage of the vehicles battery at its connection point. When the battery voltage drops to or below 11.3 volts the control module will send a page to the 2 Way. It will beep several times for 5 seconds, every 50 seconds, 3 times and flash the battery indicator on the remote. When you query the remote or unlock/disarm the system the remote will display the voltage of the vehicle's battery. Options 3 and 4 are not available with CM6300.

Special Option Groups 1 & 2

CM6300

IMPORTANT: The OP500 is required to change settings in Special Option Groups 1 and 2.

Special Option Group 1

- 2 Aux 1 Output Timing – Option 4-01 must first be set to setting 4. This special option allows a specific output duration for Aux 1 to be programmed.
- 3 Aux 2 Output Timing – Option 4-02 must first be set to setting 4. This special option allows a specific output duration for Aux 2 to be programmed.
- 4-8 Aux 3 – 7 Output Timing – Option 3-11 must first be set to setting 2 and the optional Auxiliary settings module must be used. These special options allow specific output durations to be set for Aux 3 – 7. Only available with 2 Way LCD remotes.

Special Option Group 2

This special option group allows you to determine the output type of the POC wires on CN2. For example, if you want to set POC #5 (default setting status out) to Aux 1, you will need change special option 5 to number 10. This must be done with the OP500.

Option Programming

CM6300

Option Programming Using the OP500 (programmer)

The OP500 can be used to program any available option. It is required to program options in Special Option Groups 1 and 2.

STEP 1: Make sure system is unlocked/disarmed. Using the blue or black 6 pin connector on the top of the OP500, connect it to the control module via the antenna wire. (Use the included extension cable if necessary.) Once connected, the OP500 will power up as long as the main ignition harness to the controller has been connected properly.

STEP 2: To change the option number you wish to program, use the left and right arrow keys on the OP500. It will scroll through the options available in menu 1 and then move to menu 2, then 3 and 4. Use the up and down arrow buttons on the OP500 to adjust the option settings; "1" is the default setting, and "2", "3", and "4" are the optional settings.

At the end of menu 4, if diesel mode or auxiliary setting functions were enabled – or if any of the auxiliary outputs were set to “Program”, the duration of these settings can now be adjusted.

Following the auxiliary and diesel settings (if selected), the POC options will be displayed on the OP500. The POCs can be set between 0 (default) and 19. All are only available on the CM5000.

STEP 3: When finished with the adjustment of the various option settings, press and hold the “W” (write) button until the OP500 chirps, which is approximately 2.5 seconds. This will write the settings to the control module. Wait until the module displays “Success” before disconnecting it from the antenna cable.

To reset the options, hold the “R” (reset) button and the “W” (write) button for 2.5 seconds. Release then write the reset, hold the “W” button until the OP500 chirps, which is approximately 2.5 seconds.

Option Programming Using a Remote

Using a remote is a timed process so read this section in its entirety before beginning. **IMPORTANT:** Special Option Groups cannot be programmed with a remote – the OP500 must be used.

STEP 1: Select the option menu that contains the desired programming option.

To program options use the following button combinations:

How to Program Options with 5 Button 2-Way Remotes

| | With 2 Way Remotes (Wait for chirp between each tap) | Scroll Through Menu (Wait for chirp between each tap) | Wait for corresponding parking light flash and/or siren chirp before selecting the option | Select Option 1 | Select Option 2 | Select Option 3 | Select Option 4 |
|----------------------|--|--|--|------------------------|------------------------|------------------------|------------------------|
| Option Menu 1 | (F + Trunk) for 2.5 seconds then (F + Trunk) for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Tap Trunk Button | Tap Key Button |
| Option Menu 2 | (F + Trunk) for 2.5 seconds then (F + Key) for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Tap Trunk Button | Tap Key Button |
| Option Menu 3 | (F + Key) for 2.5 seconds then (F + Trunk) for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Tap Trunk Button | Tap Key Button |
| Option Menu 4 | (F + Key) for 2.5 seconds then (F + Key) for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Tap Trunk Button | Tap Key Button |

How to Program Options on 2-Way Remotes with Separate Lock and Unlock Buttons

| | With 2 Way Remotes (Wait for chirp between each tap) | Scroll Through Menu (Wait for chirp between each tap) | Wait for corresponding parking light flash and/or siren chirp before selecting the option | Select Option 1 | Select Option 2 | Select Option 3 | Select Option 4 |
|----------------------|--|--|--|------------------------|------------------------|-----------------------------------|------------------------|
| Option Menu 1 | Lock + Unlock for 2.5 seconds then Lock + Unlock for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Hold Trunk Button for 2.5 seconds | Tap Key Button |
| Option Menu 2 | Lock + Unlock for 2.5 seconds then Lock + Key for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Hold Trunk Button for 2.5 seconds | Tap Key Button |
| Option Menu 3 | Lock + Key for 2.5 seconds then Lock + Unlock for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Hold Trunk Button for 2.5 seconds | Tap Key Button |
| Option Menu 4 | Lock + Key for 2.5 seconds then Lock + Key for 2.5 seconds | Tap Key Button | | Tap Lock Button | Tap Unlock Button | Hold Trunk Button for 2.5 seconds | Tap Key Button |

STEP 2: Scroll through menu allowing for 1 parking light flash and/or siren chirp per step.

STEP 3: Once finished scrolling through the menu wait for the parking lights and/or siren chirp to confirm the option number. i.e. option 2-04 will flash 4 times. Then use one of the table selections to select the option corresponding to your desired setting.

Resetting to Factory Defaults: To reset the options in a particular menu group, enter the menu shown in the above tables. To reset options with a 2 Way remote tap button 3 three times. To reset options with a 1 Way remote tap the Key/Start button 3 times. Wait for the siren to chip and parking lights to flash between each tap. After the third tap, the option menu will reset and the siren will chirp three times. This must be done for each option group that needs to be reset.

How to Program Options with 2-Way Remotes with Roman Numerals

| | With 2 Way Remotes (Wait for chirp between each tap) | Scroll Through Menu (Wait for chirp between each tap) | Wait for corresponding parking light flash and/or siren chirp before selecting the option | Select Option 1 | Select Option 2 | Select Option 3 | Select Option 4 |
|----------------------|---|--|--|------------------------|------------------------|------------------------|------------------------|
| Option Menu 1 | (1 + 2) for 2.5 seconds then (1 + 2) for 2.5 seconds | Tap Button 4 | | Tap Button 1 | Tap Button 2 | Tap Button 3 | Tap Button 4 |
| Option Menu 2 | (1 + 2) for 2.5 seconds then (1 + 4) for 2.5 seconds | Tap Button 4 | | Tap Button 1 | Tap Button 2 | Tap Button 3 | Tap Button 4 |
| Option Menu 3 | (1 + 4) for 2.5 seconds then (1 + 2) for 2.5 seconds | Tap Button 4 | | Tap Button 1 | Tap Button 2 | Tap Button 3 | Tap Button 4 |
| Option Menu 4 | (1 + 4) for 2.5 seconds then (1 + 4) for 2.5 seconds | Tap Button 4 | | Tap Button 1 | Tap Button 2 | Tap Button 3 | Tap Button 4 |

How To Program Options With 1 Way Remotes

| | With 2 Way Remotes (Wait for chirp between each tap) | Scroll Through Menu (Wait for chirp between each tap) | Wait for corresponding parking light flash and/or siren chirp before selecting the option | Select Option 1 | Select Option 2 | Select Option 3 | Select Option 4 |
|----------------------|--|--|--|------------------------|------------------------|------------------------|----------------------------------|
| Option Menu 1 | Lock + Unlock for 2.5 seconds then Lock + Unlock for 2.5 seconds | Hold Trunk + Key for 2.5 seconds | | Tap Lock Button | Tap Unlock Button | Tap Key Button | Hold Trunk + Key for 2.5 seconds |
| Option Menu 2 | Lock + Unlock for 2.5 seconds then Lock + Key for 2.5 seconds | Hold Trunk + Key for 2.5 seconds | | Tap Lock Button | Tap Unlock Button | Tap Key Button | Hold Trunk + Key for 2.5 seconds |
| Option Menu 3 | Lock + Key for 2.5 seconds then Lock + Unlock for 2.5 seconds | Hold Trunk + Key for 2.5 seconds | | Tap Lock Button | Tap Unlock Button | Tap Key Button | Hold Trunk + Key for 2.5 seconds |
| Option Menu 4 | Lock + Key for 2.5 seconds then Lock + Key for 2.5 seconds | Hold Trunk + Key for 2.5 seconds | | Tap Lock Button | Tap Unlock Button | Tap Key Button | Hold Trunk + Key for 2.5 seconds |

Troubleshooting**CM6300****Alarm LED Diagnostics**

When the alarm is triggered the LED on the RPS (if installed), Secure Valet (if installed) and the LED (if installed) will flash a certain amount of times as shown in the table below. This is intended for users with 1 Way remotes.

| Priority | Trigger | LED Flash Diagnostic |
|----------|-------------------------------|-------------------------------|
| 1 | Door/Hood/Trunk/Ign Triggered | 2 flashes, break, then repeat |
| 2 | 2nd Shock Triggered | 3 flashes, break, then repeat |
| 3 | 2nd Auxiliary Input Triggered | 4 flashes, break, then repeat |
| 4 | Panic with remote | 5 flashes, break, then repeat |

Frequently Asked Questions**CM6300****I have everything hooked up and the system will not respond.**

A: The remotes need to be programmed. Review the "Common Procedure" section of this manual.

I am trying to program the control module with the OP500 Option Programmer and it flashes "ER 01" when I plug it in to the antenna cable. What should I do?

A: Make sure that the system is not locked/armed. The last thing to check is the antenna cable or antenna extension cable – make sure this is not damaged. If you need to, try another cable. When the OP500 is working properly, it will read "success good." You no longer need to program the remotes before the OP500 will sync.

I need a ground when armed wire, does the control module have one?

A: You can use the ground when armed wire on CN3 that goes to the starter kill relay. You must cut this wire and place a diode in line so that when the ignition on the other side of the relay goes to ground, it won't back feed to your accessory. Install the stripe side of the diode facing the control module.

On the brain, how do I set the auxiliaries?

A: Auxiliary 1 through 5 are defaulted on with the CM6300. Although you must have an Option Programmer (OP500) to change the outputs to a specific time. Secure auxiliary (option 4-05) will prevent these outputs from triggering without doing query first. Please review the "Special Option Group" programming section of this manual for more details.

The vehicle will lock and unlock but not flash the parking lights.

A: The system is in valet mode. Tap buttons (I) + (III) for 0.5 second or Lock and Trunk Release buttons for a half second.

Whenever I try to arm the vehicle, it chirps the siren 3 times and will not arm.

A: Check the hood and trunk trigger inputs.

Do the door locks flip flop in polarity?

A: No. You can use the CompuPack (relay pack) for high current positive (+) locks, or the DM600 harness used for low current 600mA positive (+) locks.

What are Firmware Version Diagnostics?

A: When you turn the Ignition on and hold buttons 1 and 4 or Lock and Key/Start for 2.5 seconds then the parking lights will flash 1 time on the CM6 series showing V.1 and so forth. Current version 3.11 should show 3 flashes when triggered.

What is this cartridge slot on the rear of the CM6300?

A: This is the slot for the Blade cartridge system. This slot is for the IdataLink Blade remote start bypass modules. For more information on the compatibility and install information please visit www.idatalink.com/fitguide. Using this system eliminates many connections between your standard control module and bypass module. **IMPORTANT:** If you are not using the Blade then you will not have or use the 20 pin connector next to the back up battery port.

I'm using the RPS Touch but my LED's and Secure Valet LED does not flash.

A: The CM6000 and CM6300 LED and Secure Valet LEDs will not work when using an RPS Touch. This is a hardware limitation. The RPS 2 will work with LEDs and Secure Valet.

Technical Support Contacts

CM6300

Firstech technical support is reserved for authorized dealers only.

Monday - Friday: 888-820-3690
(8:00 am – 5:00 pm Pacific Coast Time)

Email: support@compustar.com

Web: www.compustar.com/dealersupport



Wire Diagrams

Click on the "Installogy Access Client" link found on your desktop. If you are a qualified dealer and unable to access this site, call your sales representative or the number above.